


FF - HIGH/LOW CONDITION

FF2010 - ABC - HIGH/LOW RAKE DETAIL

FF2015 - ABC - HIGH/LOW RAKE DETAIL

FF2010 - HIGH/LOW RAKE DETAIL

[Download the DWG file by clicking here.](#)

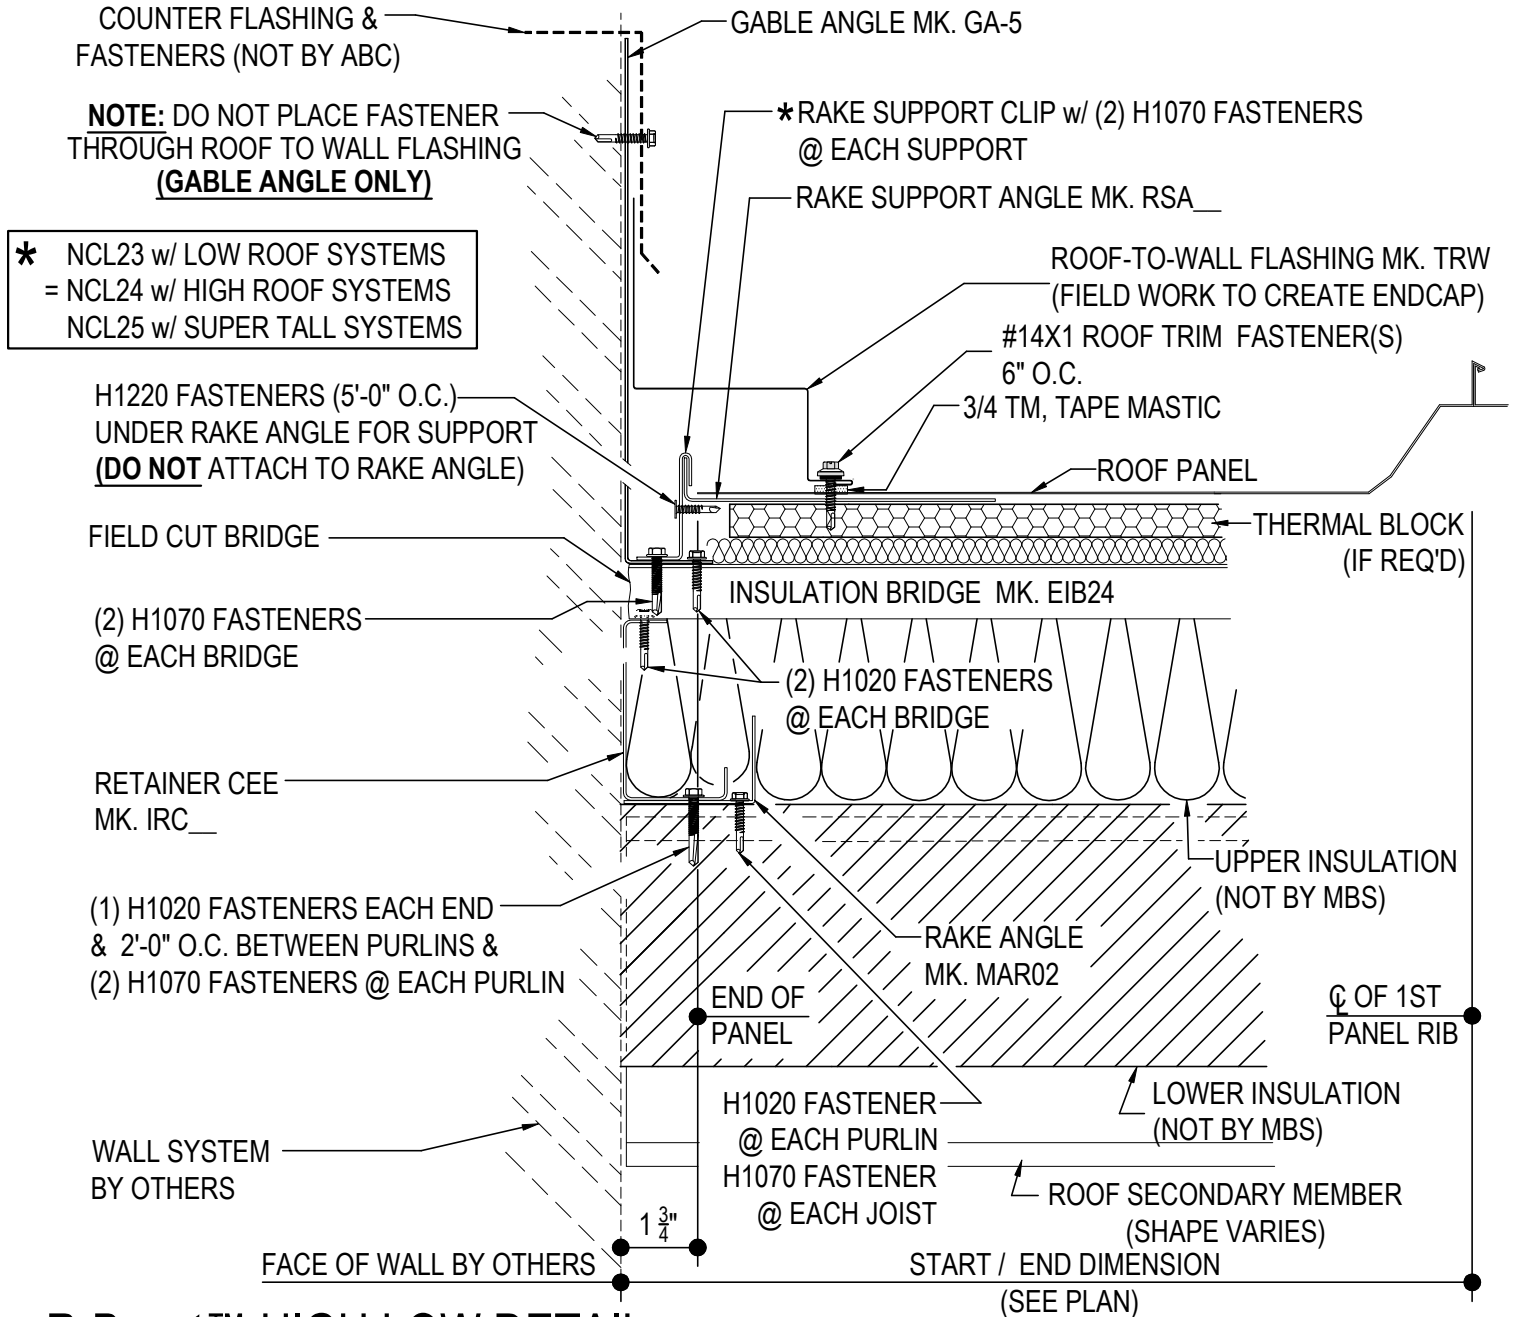


R-Boost™ HIGH LOW DETAIL

RAKE PARAPET DETAIL W/ WALL BY OTHERS

FF2010

FF2015 - HIGH/LOW RAKE DETAIL

Download the DWG file by clicking [here](#).

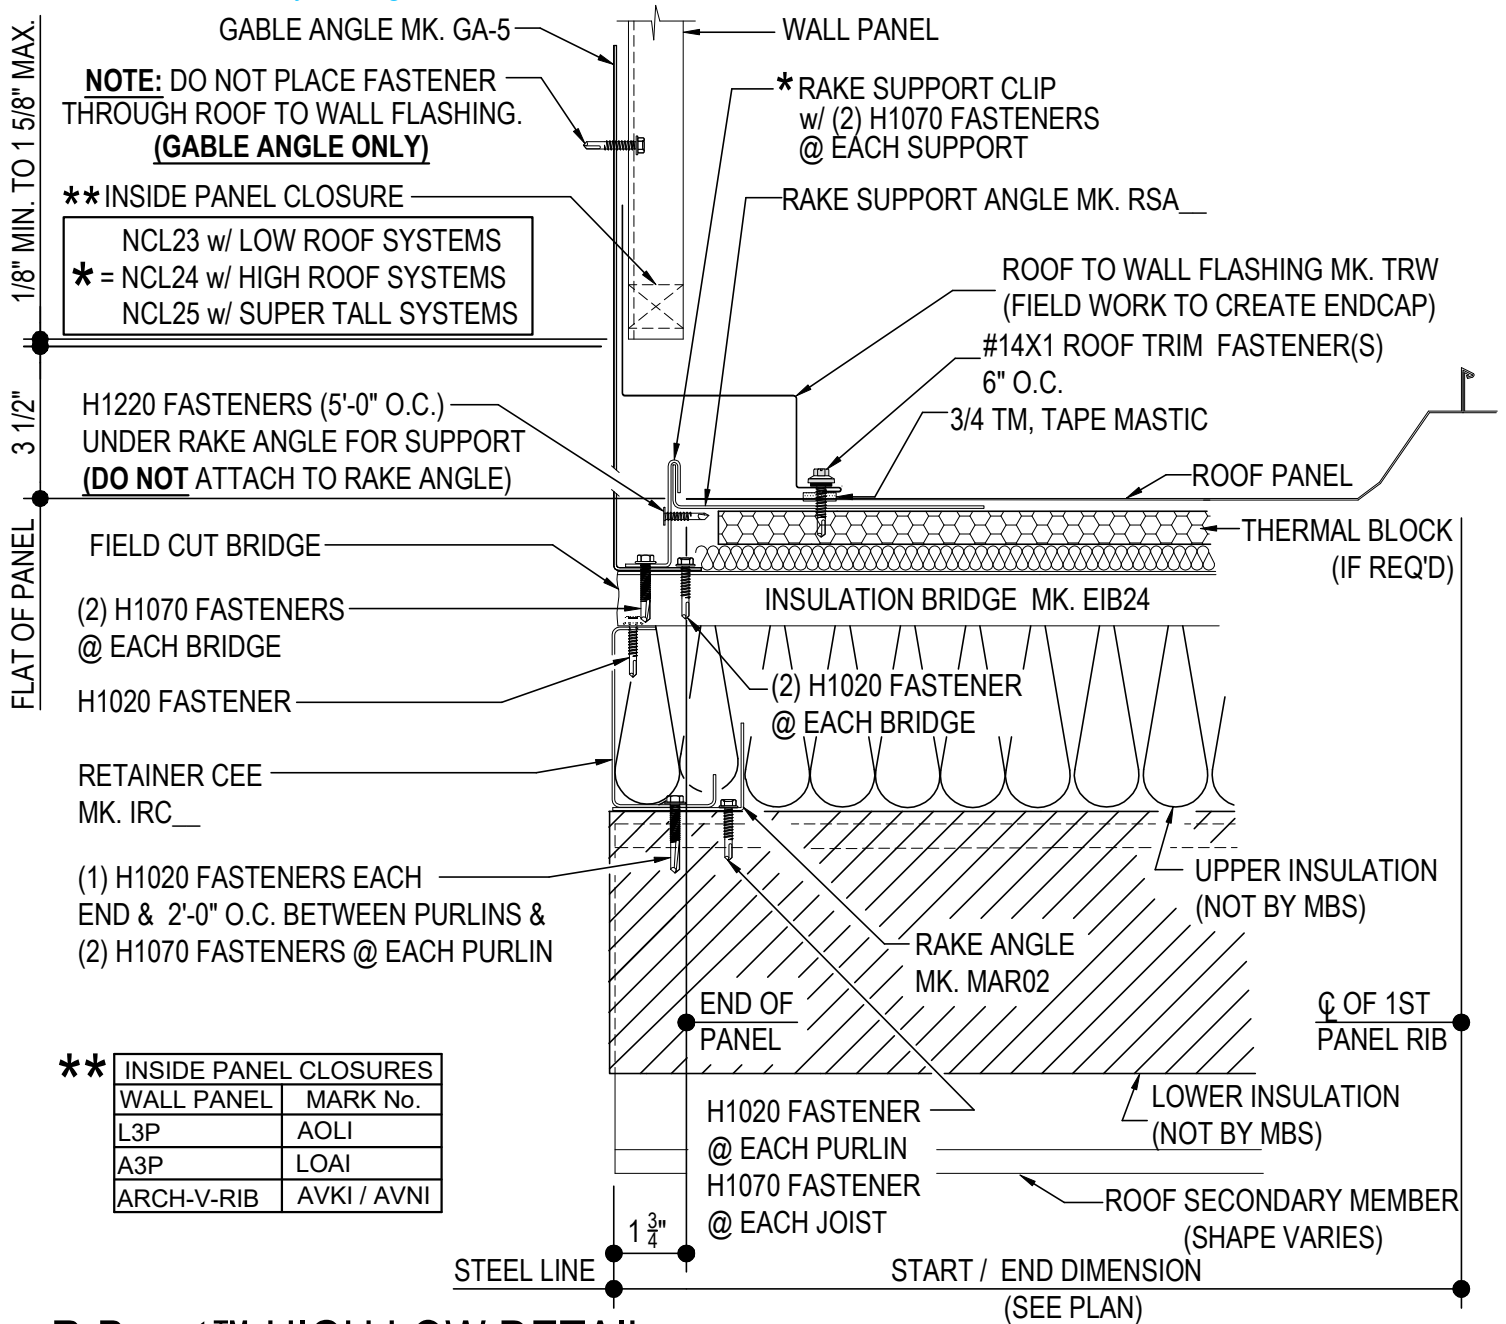

**

INSIDE PANEL CLOSURES	
WALL PANEL	MARK No.
L3P	AOLI
A3P	LOAI
ARCH-V-RIB	AVKI / AVNI

R-Boost™ HIGH LOW DETAIL

RAKE PARAPET DETAIL W/ WALL PANEL

FF2015