


FF - HIGH/LOW CONDITION

FF2010 - NBS - HIGH/LOW RAKE DETAIL

FF2015 - NBS - HIGH/LOW RAKE DETAIL

FF2010 - HIGH/LOW RAKE DETAIL

[Download the DWG file by clicking here.](#)

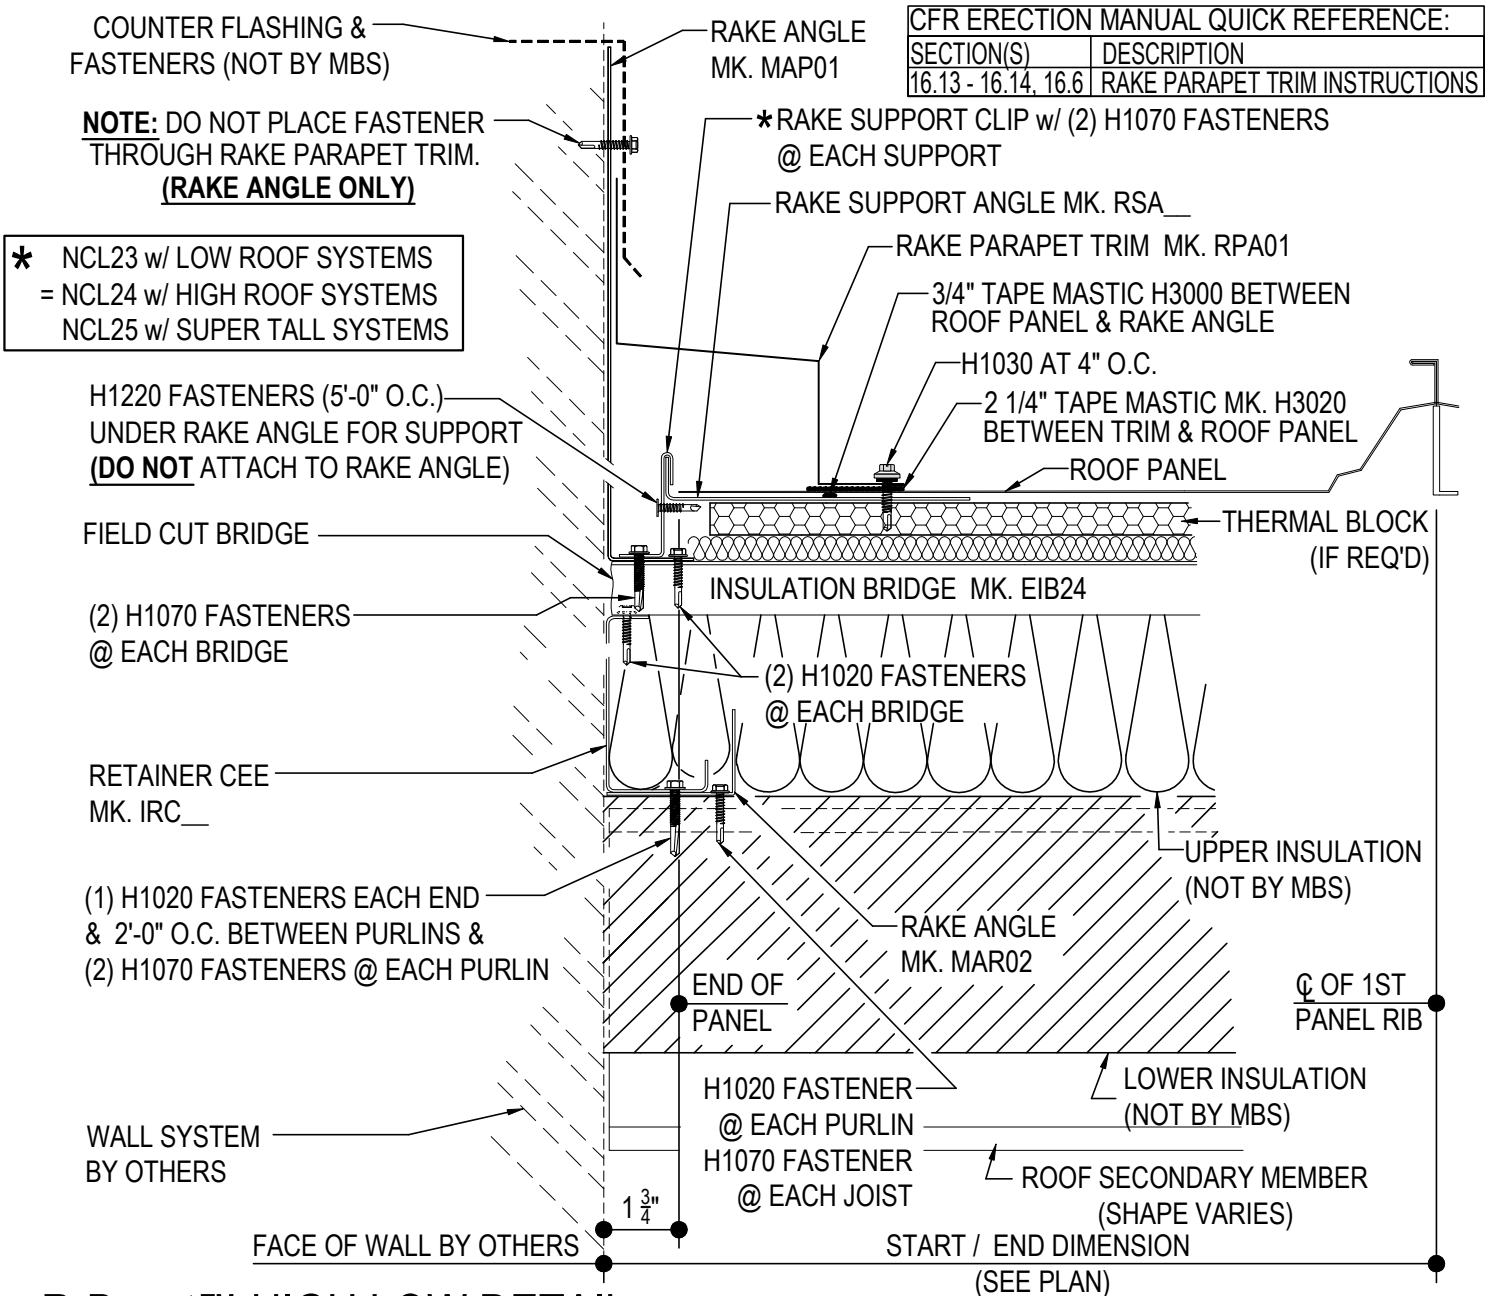


R-Boost™ HIGH LOW DETAIL

RAKE PARAPET DETAIL W/ WALL BY OTHERS

FF2010

FF2015 - HIGH/LOW RAKE DETAIL

Download the DWG file by clicking here.

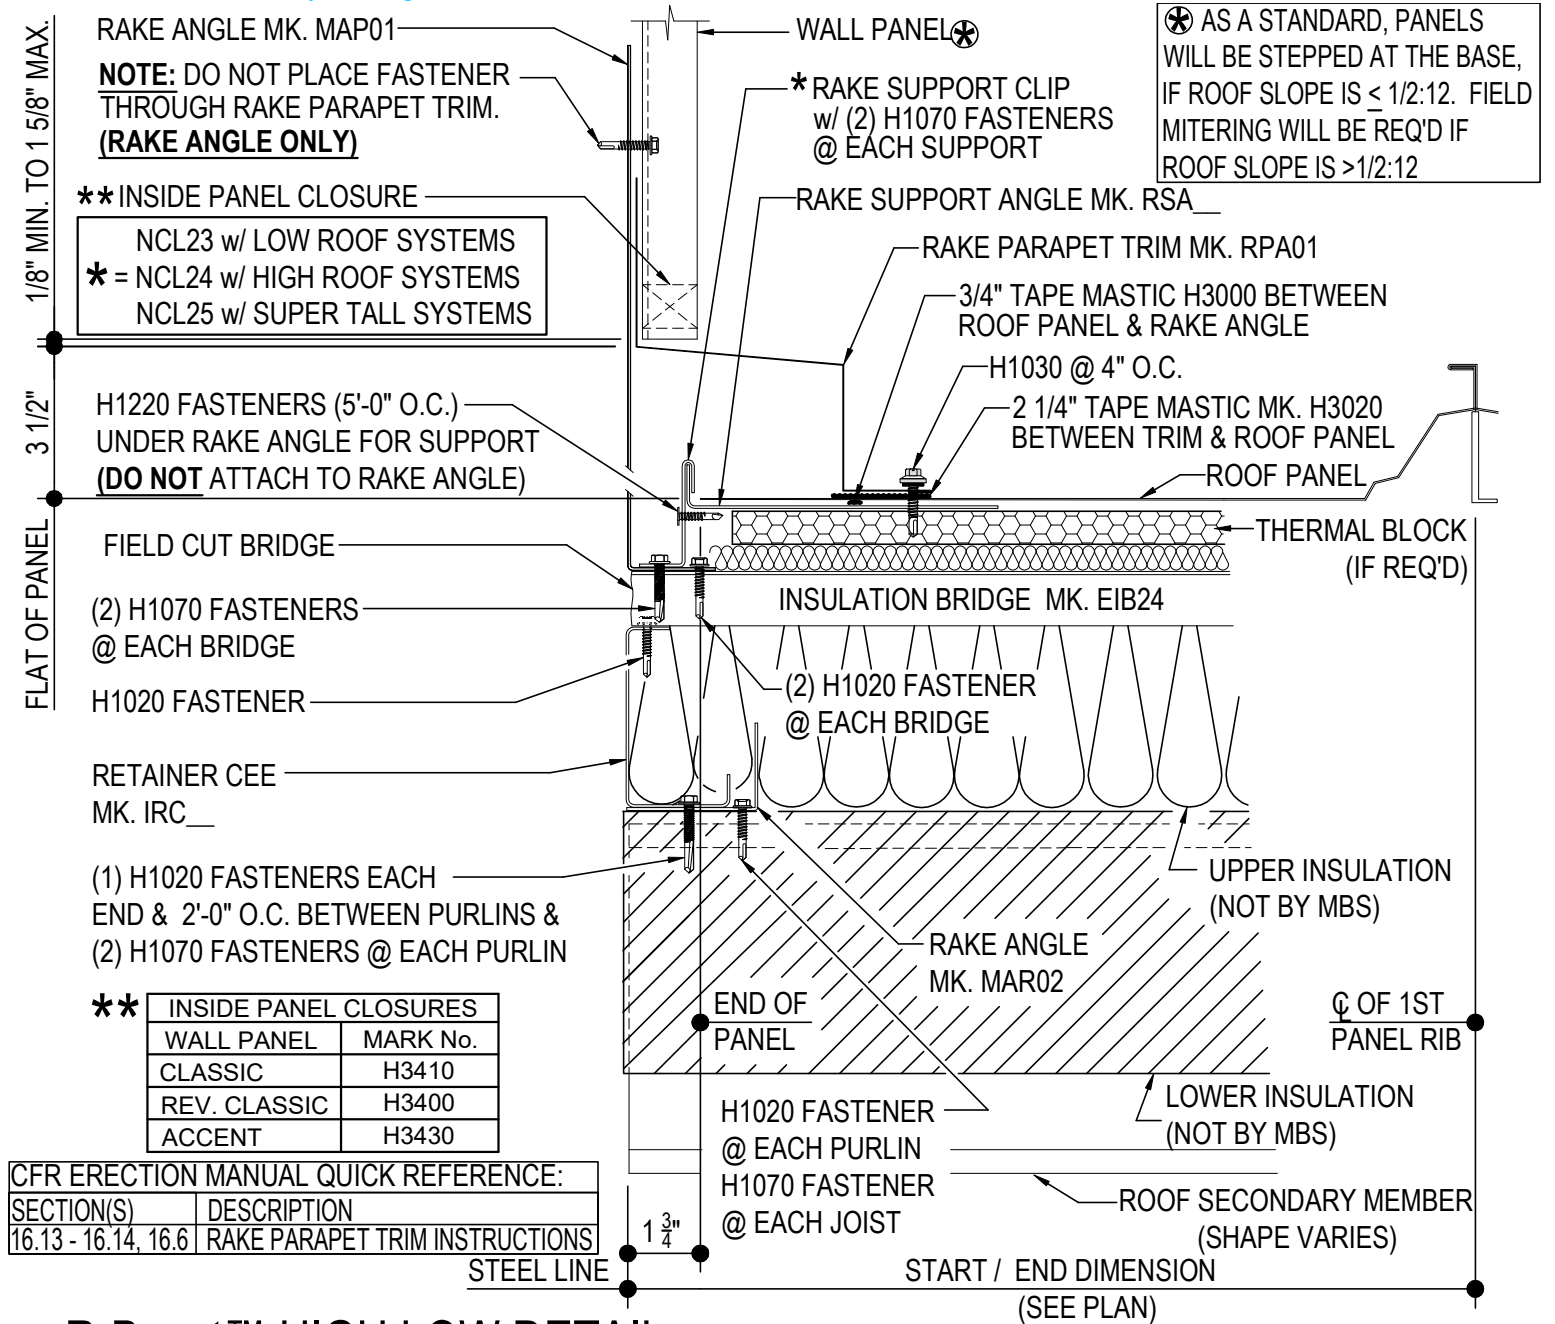

R-Boost™ HIGH LOW DETAIL

RAKE PARAPET DETAIL W/ WALL PANEL

FF2015