


**HIGH EAVE PARAPET DETAILS**

FI2010 - ROOF TO PARAPET WALL

FI2015 - ROOF TO WALL

FI2010 - ROOF TO PARAPET WALL DETAIL

[Download the DWG file by clicking here.](#)

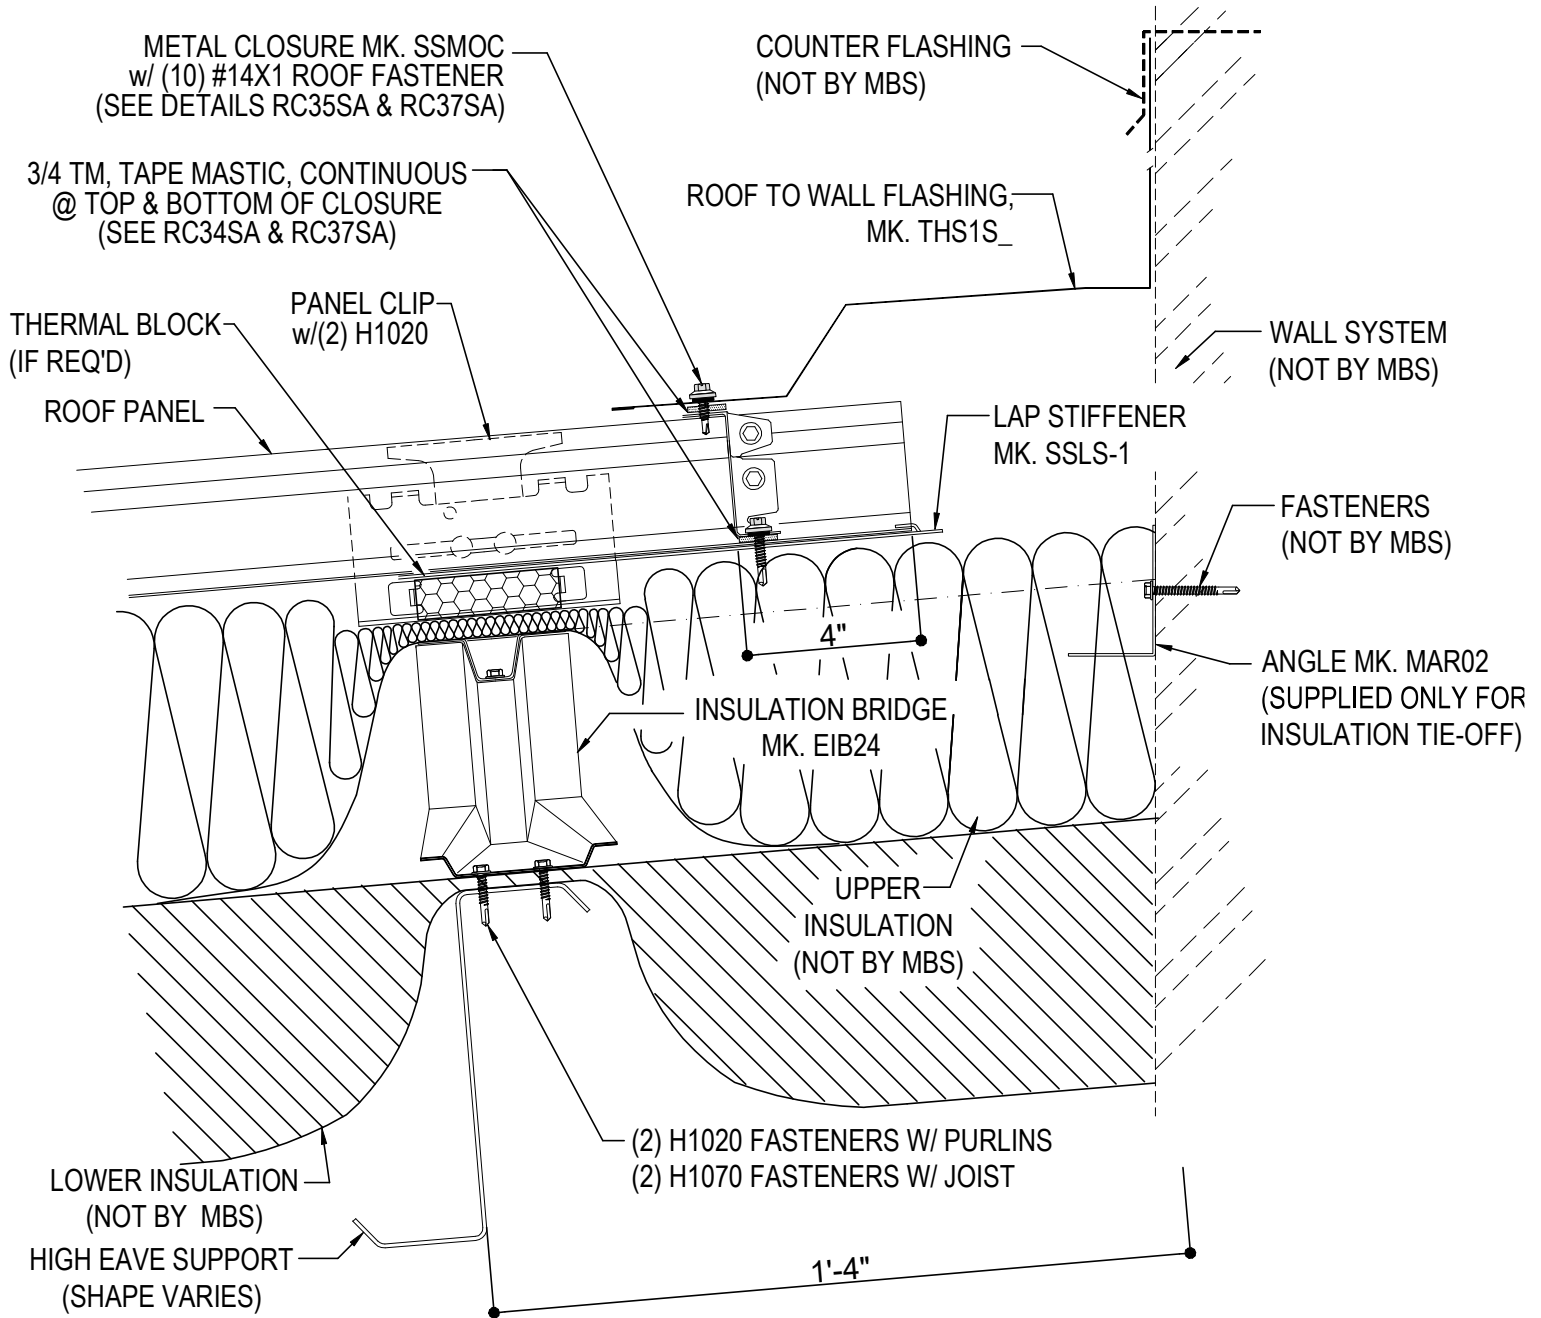


**R-Boost™ ROOF TO WALL DETAIL**

HIGH EAVE PARAPET DETAIL WITH WALL BY OTHERS

**FI2010**

FI2015 - ROOF TO WALL DETAIL

[Download the DWG file by clicking here.](#)

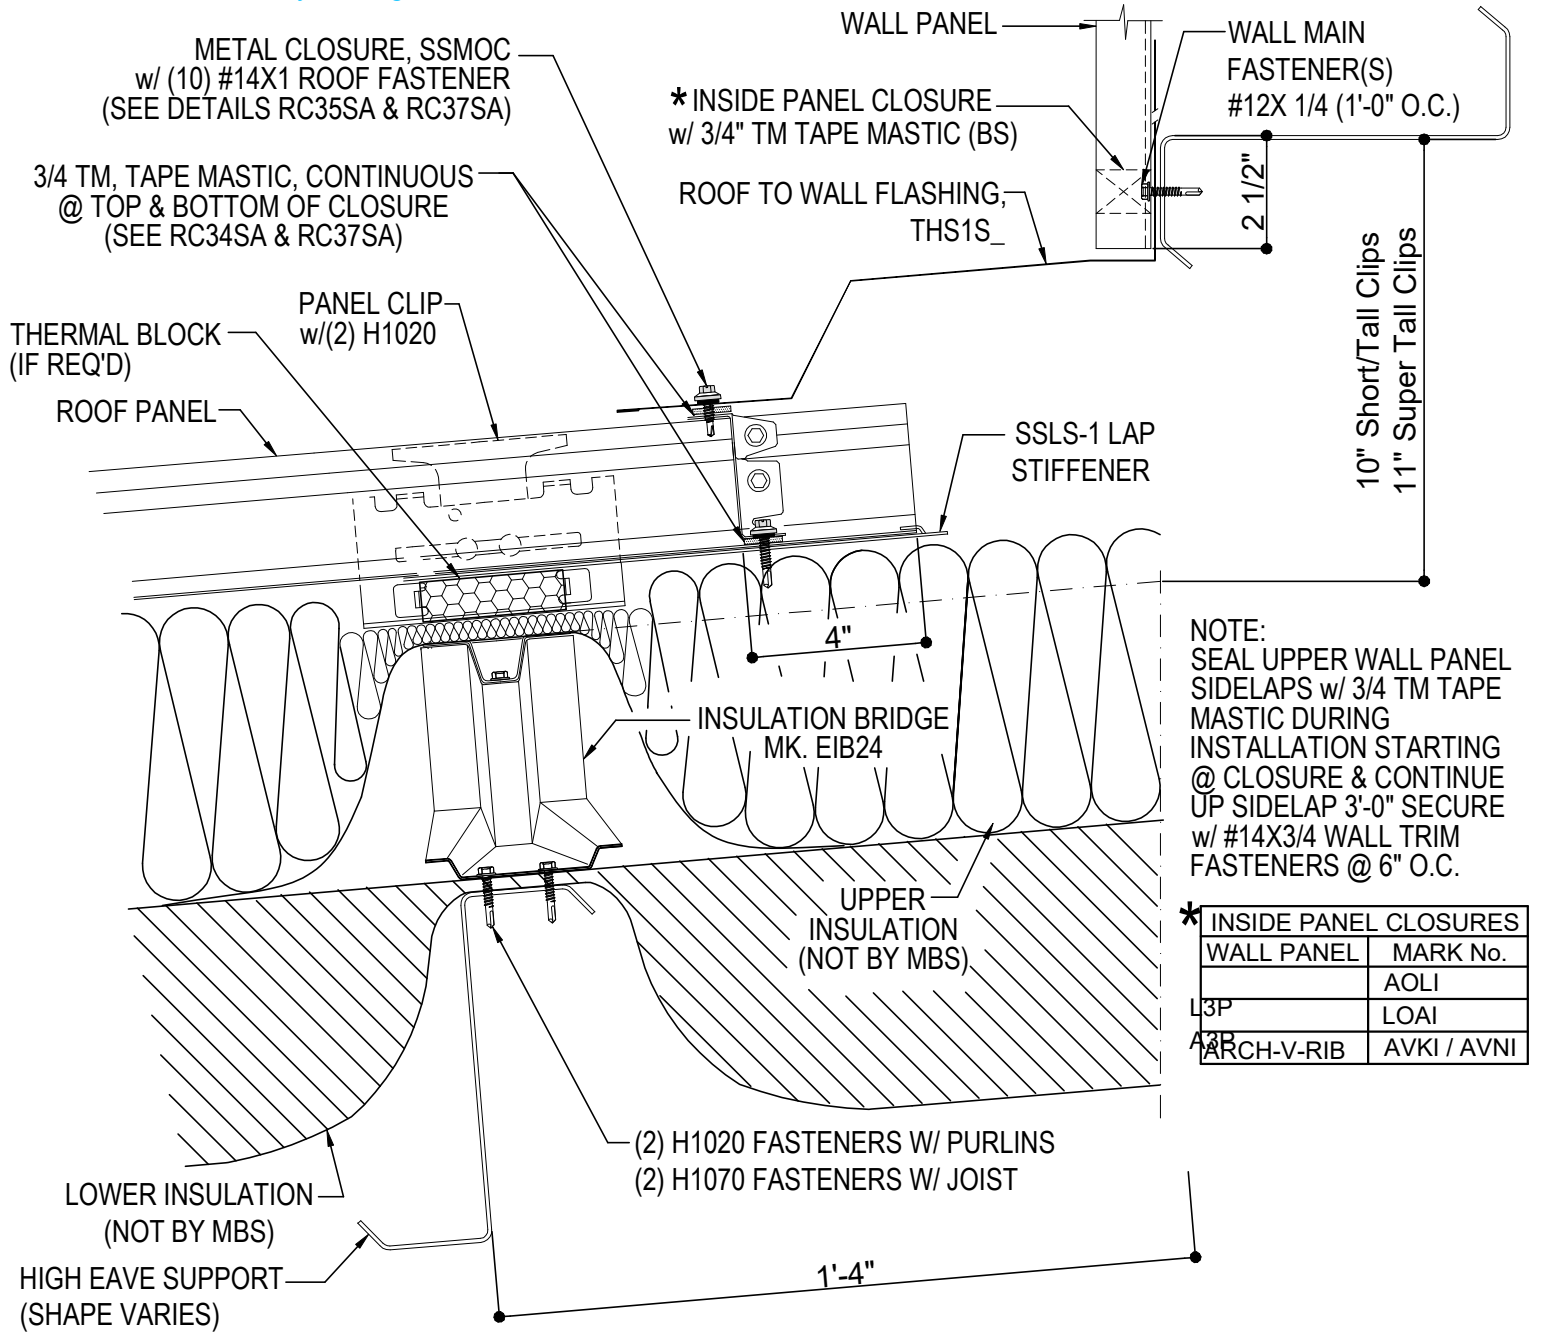

NOTE:  
SEAL UPPER WALL PANEL SIDELAPS w/ 3/4 TM TAPE MASTIC DURING INSTALLATION STARTING @ CLOSURE & CONTINUE UP SIDELAP 3'-0" SECURE w/ #14X3/4 WALL TRIM FASTENERS @ 6" O.C.

* INSIDE PANEL CLOSURES	
WALL PANEL	MARK No.
	AOLI
L3P	LOAI
A3B	AVKI / AVNI

**R-Boost™ ROOF TO WALL DETAIL**

HIGH EAVE PARAPET DETAIL WITH WALL PANEL

**FI2015**