


HIGH EAVE PARAPET

FI2010-CBC - ROOF TO PARAPET WALL DETAIL

FI2015-CBC - ROOF TO WALL DETAIL

FI2010 - ROOF TO PARAPET WALL DETAIL

[Download the DWG file by clicking here.](#)

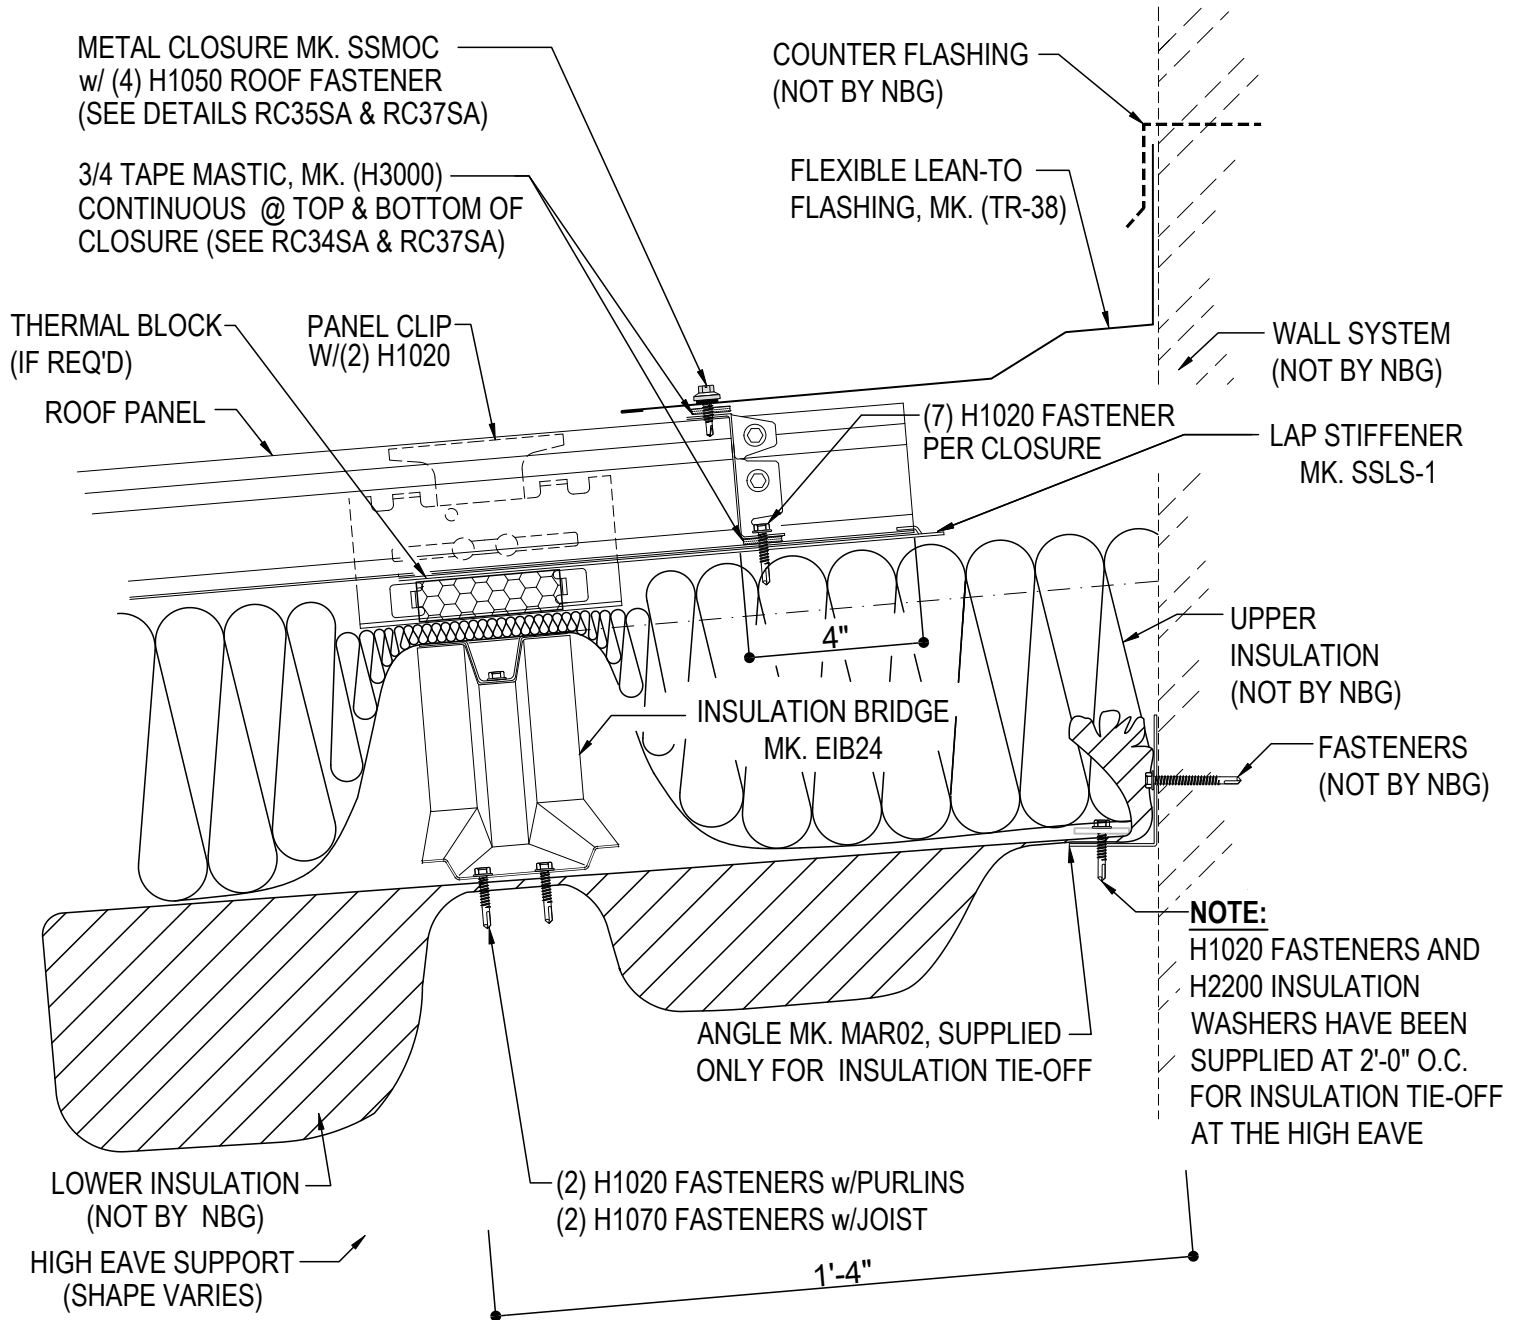


R-Boost™ ROOF TO WALL DETAIL

HIGH EAVE PARAPET DETAIL WITH WALL BY OTHERS

FI2010

FI2015 - ROOF TO WALL DETAIL

[Download the DWG file by clicking here.](#)

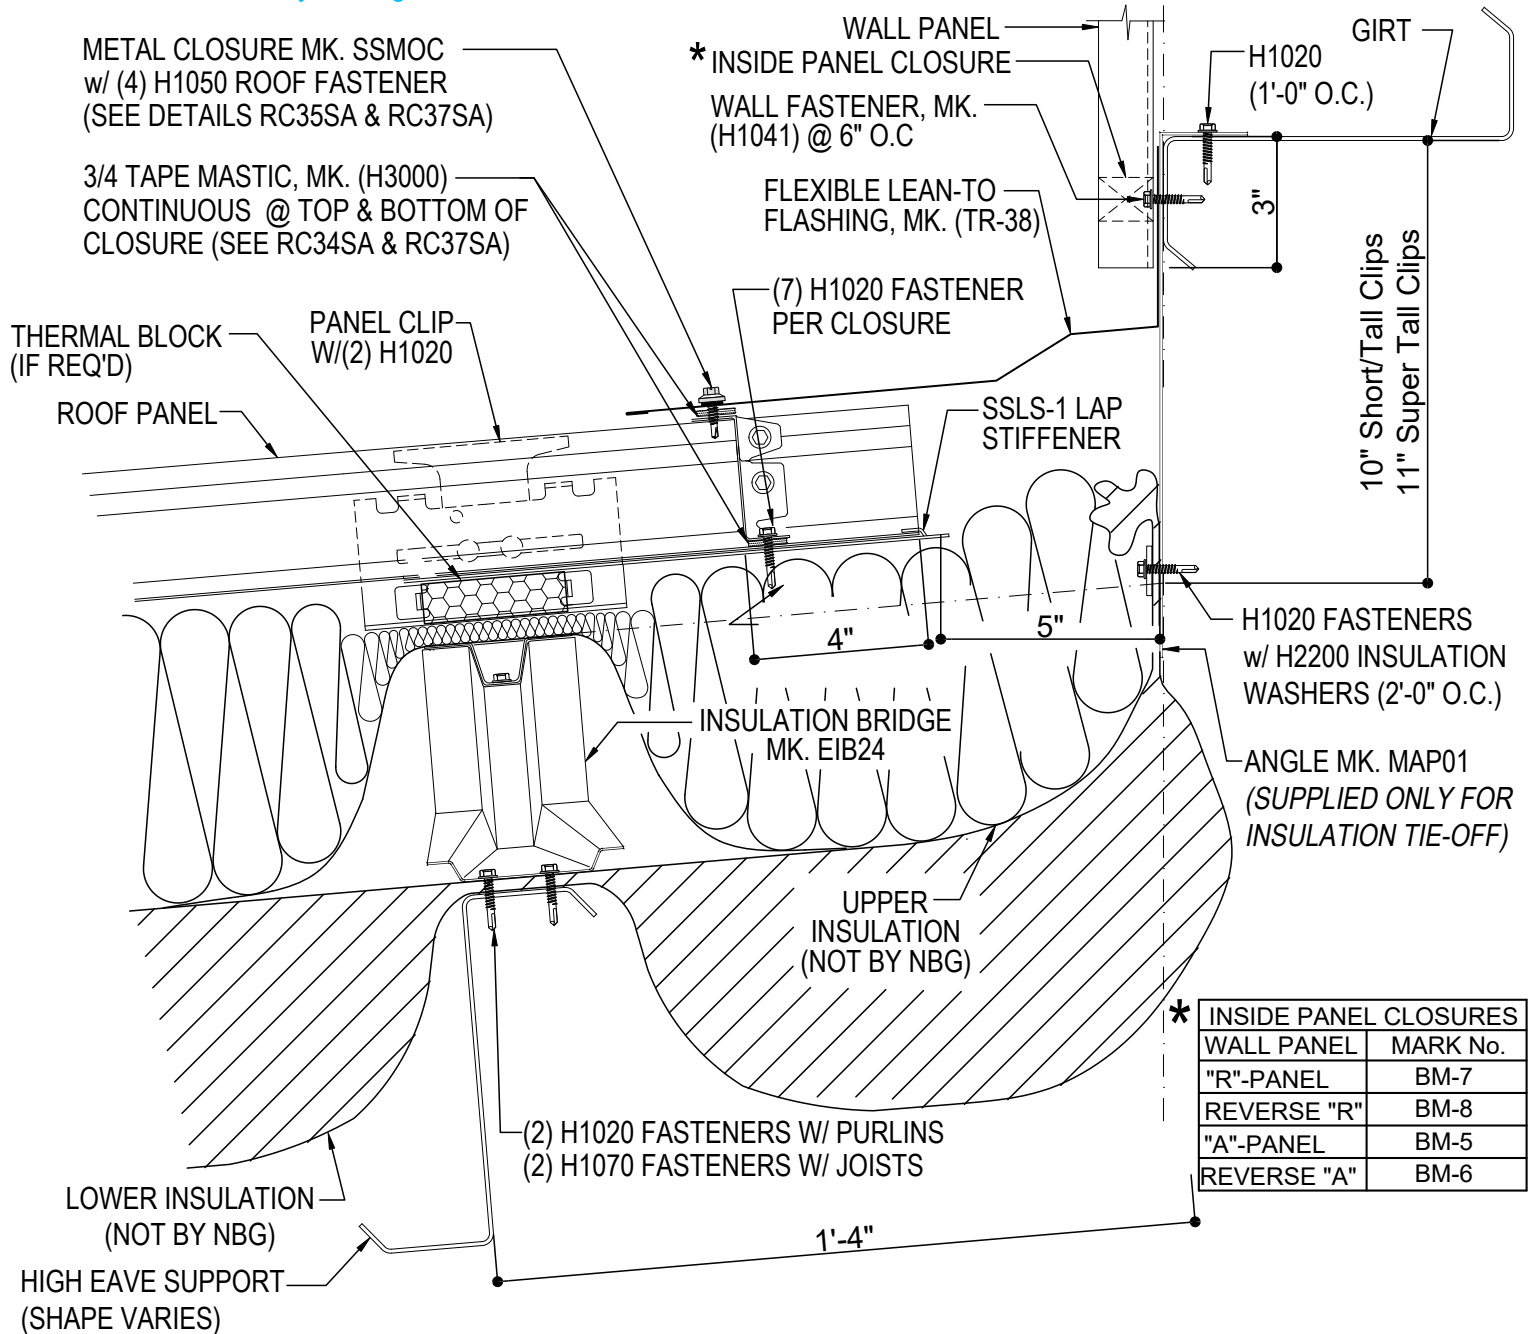

R-Boost™ ROOF TO WALL DETAIL

HIGH EAVE PARAPET DETAIL WITH WALL PANEL

FI2015