


**HIGH EAVE PARAPET DETAILS**

FI2010 - ROOF TO PARAPET WALL

FI2015 - ROOF TO WALL

FI2010 - ROOF TO PARAPET WALL DETAIL

[Download the DWG file by clicking here.](#)

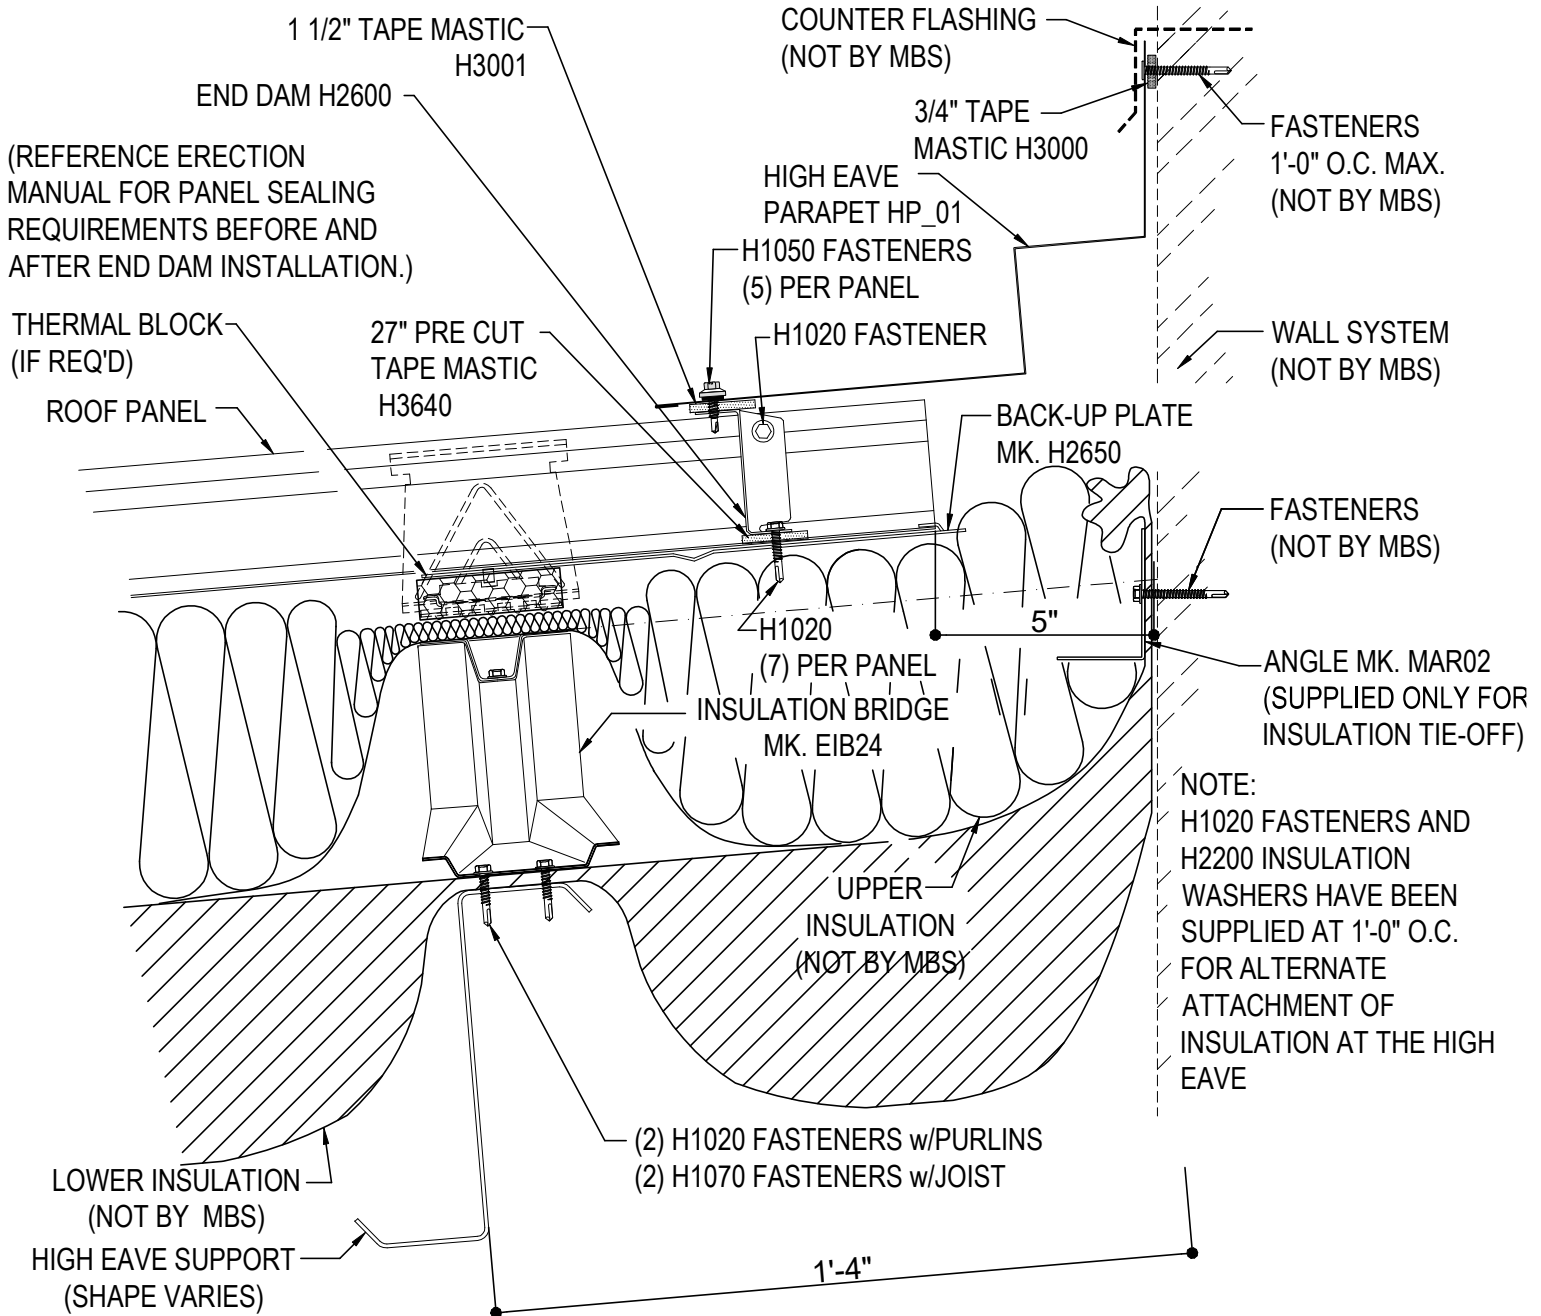


**R-Boost™ ROOF TO WALL DETAIL**

HIGH EAVE PARAPET DETAIL WITH WALL BY OTHERS

**FI2010**

FI2015 - ROOF TO WALL DETAIL

[Download the DWG file by clicking here.](#)

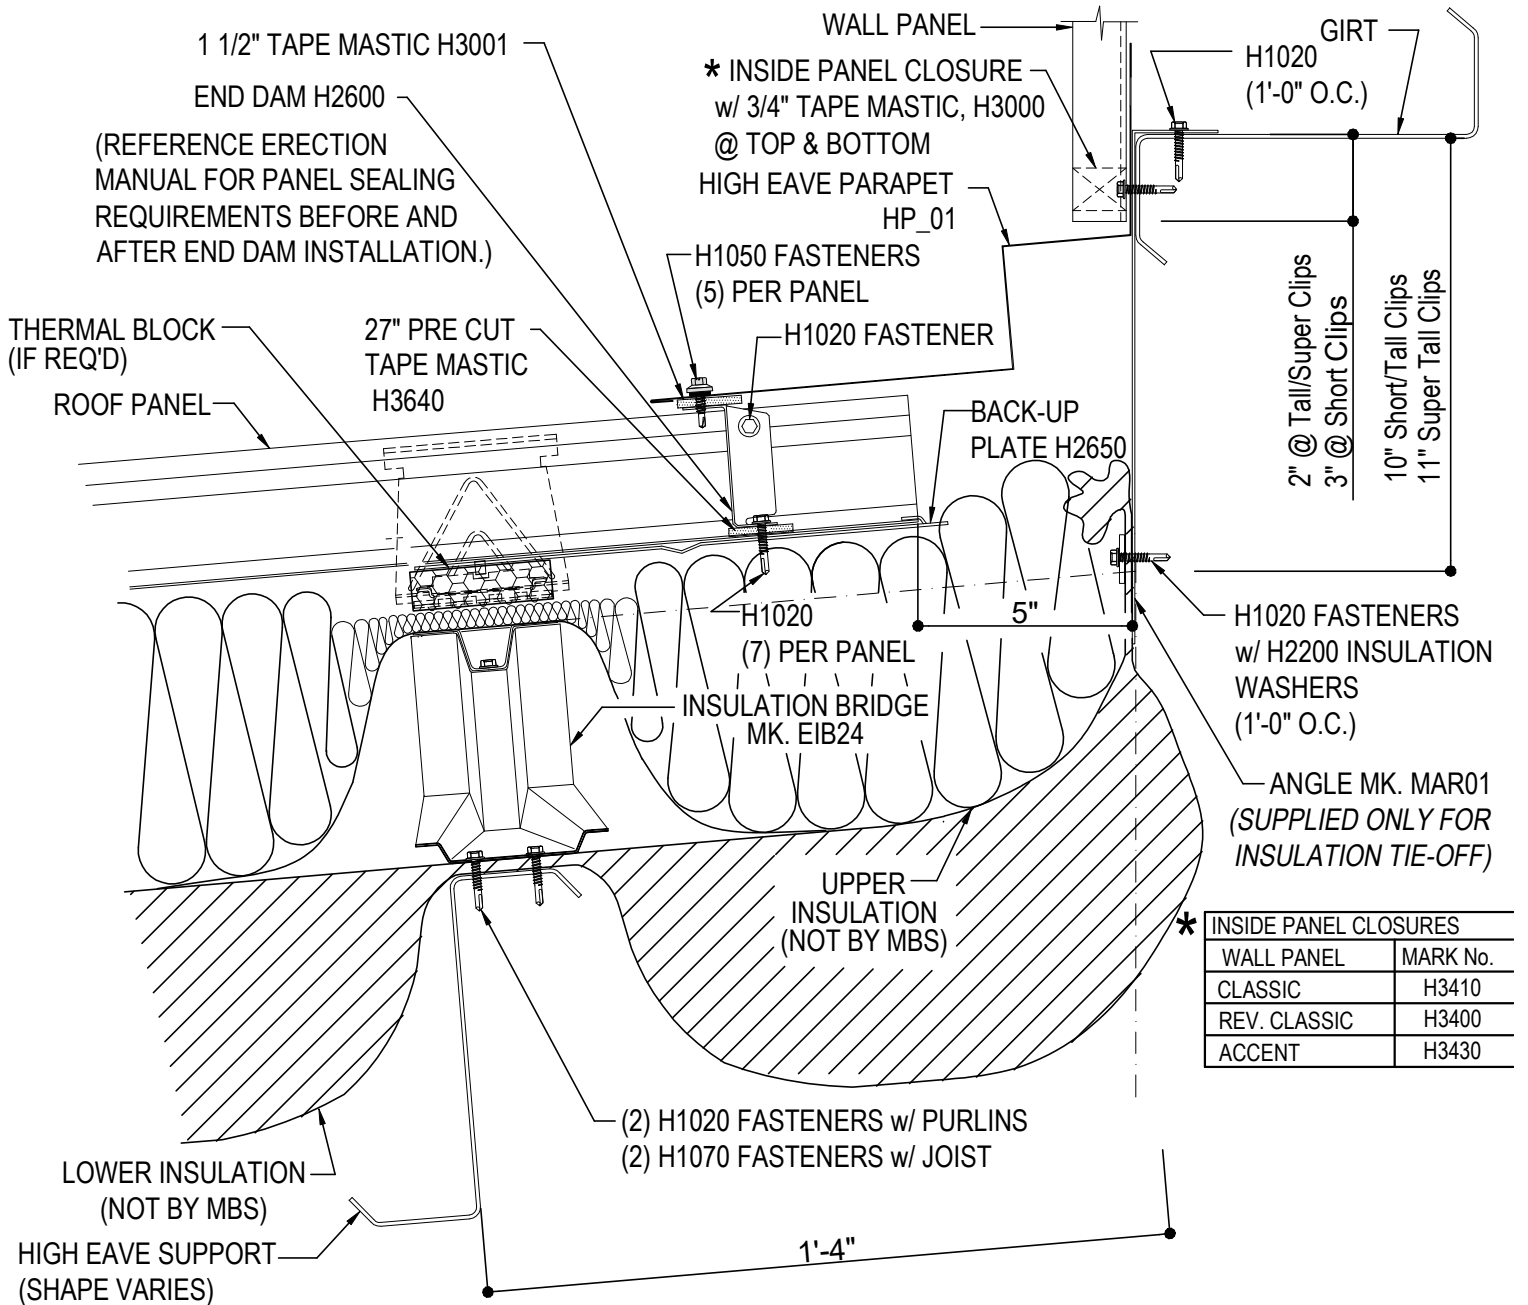

## R-Boost™ ROOF TO WALL DETAIL

HIGH EAVE PARAPET DETAIL WITH WALL PANEL

**FI2015**