


**PARAPET GUTTER**

FK2050 - ABC - LOW EAVE WITH PARAPET GUTTER

---

FK2050 - LOW EAVE W/ PARAPET GUTTER

[Download the DWG file by clicking here.](#)

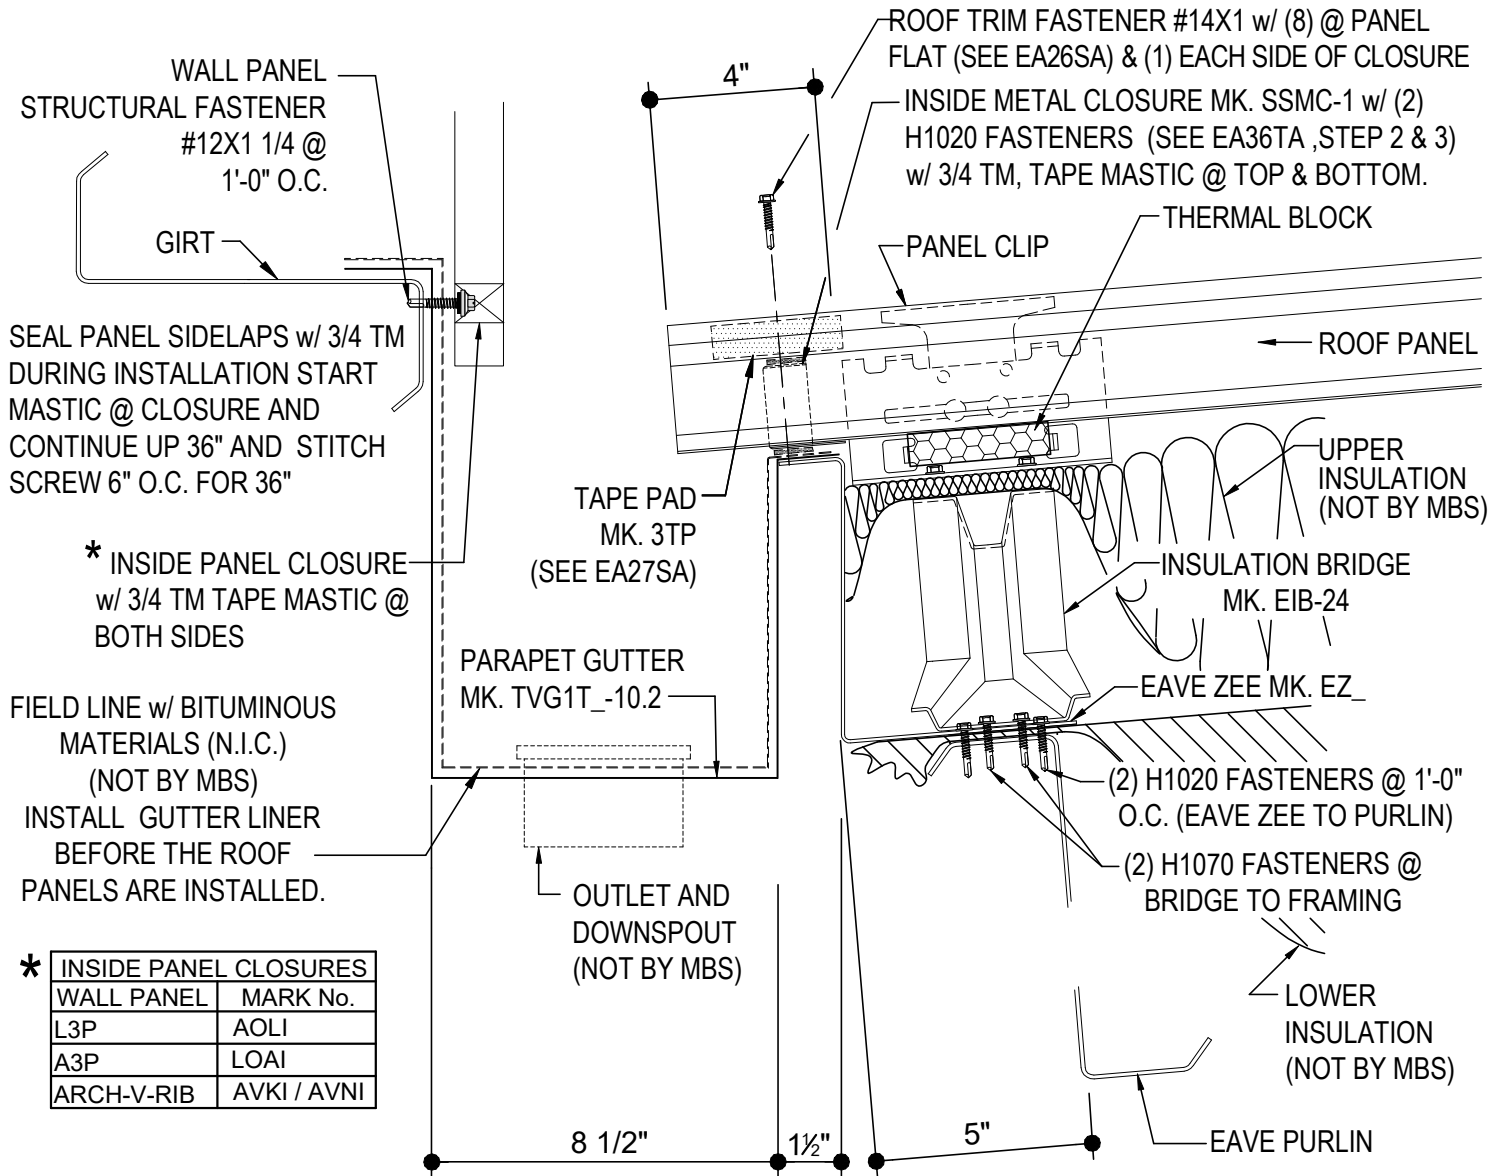

**R-Boost™ PARAPET GUTTER DETAIL**

R-BOOST LOW EAVE DETAIL w/ PARAPET GUTTER

**FK2050**