


PARAPET GUTTER

FK2050 - NBS - LOW EAVE WITH PARAPET GUTTER

FK2050 - LOW EAVE W/ PARAPET GUTTER

[Download the DWG file by clicking here.](#)

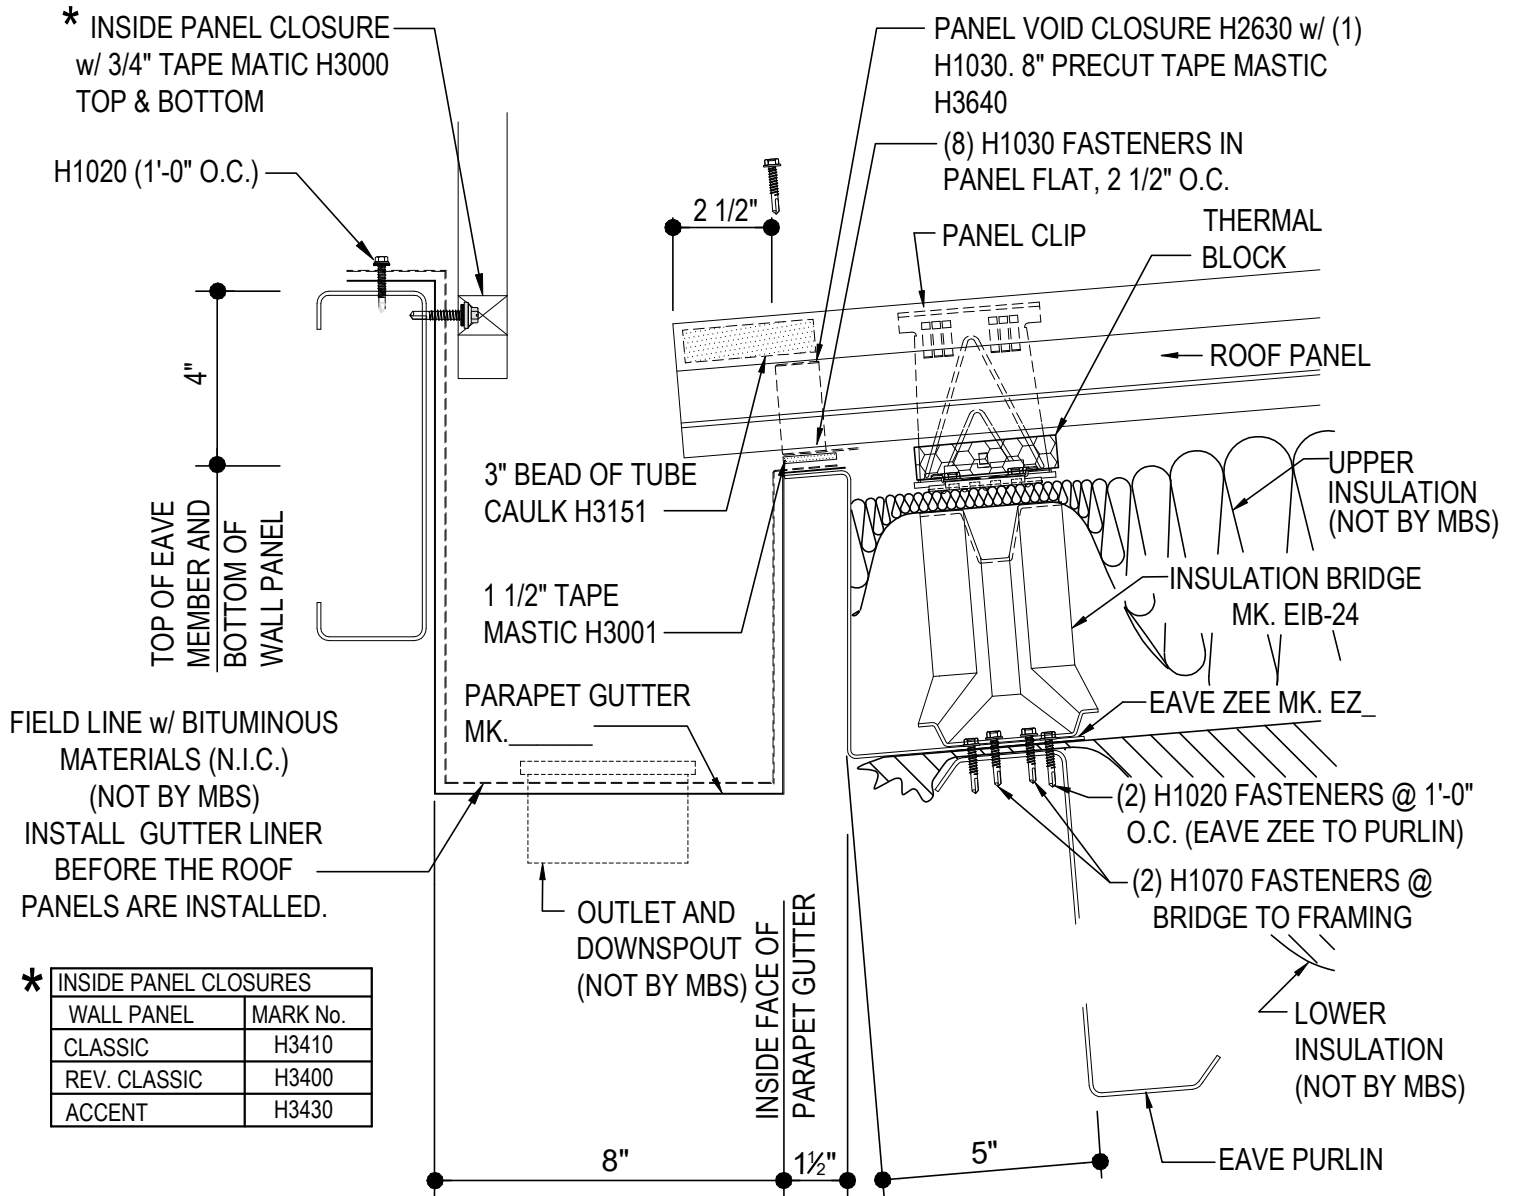

R-Boost™ PARAPET GUTTER DETAIL

R-BOOST LOW EAVE DETAIL w/ PARAPET GUTTER

FK2050