

HORIZONTAL SOFFIT

IK0005 - SOFFIT PANEL ERECTION DETAIL

IK0007 - FLAT SL PANEL ATTACHMENT DETAIL

IK0010 - HORIZONTAL SOFFIT TERMINATION AT FACE

IK0020 - HORIZONTAL SOFFIT TERMINATION AT EDGE

IK0030 - HORIZONTAL SOFFIT TERMINATION AT WALL

IK0040 - HORIZONTAL SOFFIT TERMINATION AT MITERED CORNER


IK0005 - SOFFIT PANEL ERECTION DETAIL

[Download the DWG file by clicking here.](#)

- H1060 STITCH FASTENER
- ▣ H1040 STRUCTURAL FASTENER
- NEGATIVE LOAD CLIP (MK. NLC-1)
(SEE FLAT SL PANEL ATTACHMENT DETAIL)

ERECTOR NOTE:

ERECTION OF THE SOFFIT PANEL MUST BE COORDINATED PROPERLY WITH THE SOFFIT TRIM CONDITIONS AS SHOWN IN THE ERECTION DETAILS. PLACEMENT AND ORIENTATION OF THE SOFFIT PANEL MAY VARY BY CONDITION AND SUPPORT MEMBERS MAY ALSO VARY. USE THIS FASTENING PATTERN UNLESS TRIM SECTION SHOWS A SPECIFIC PATTERN.

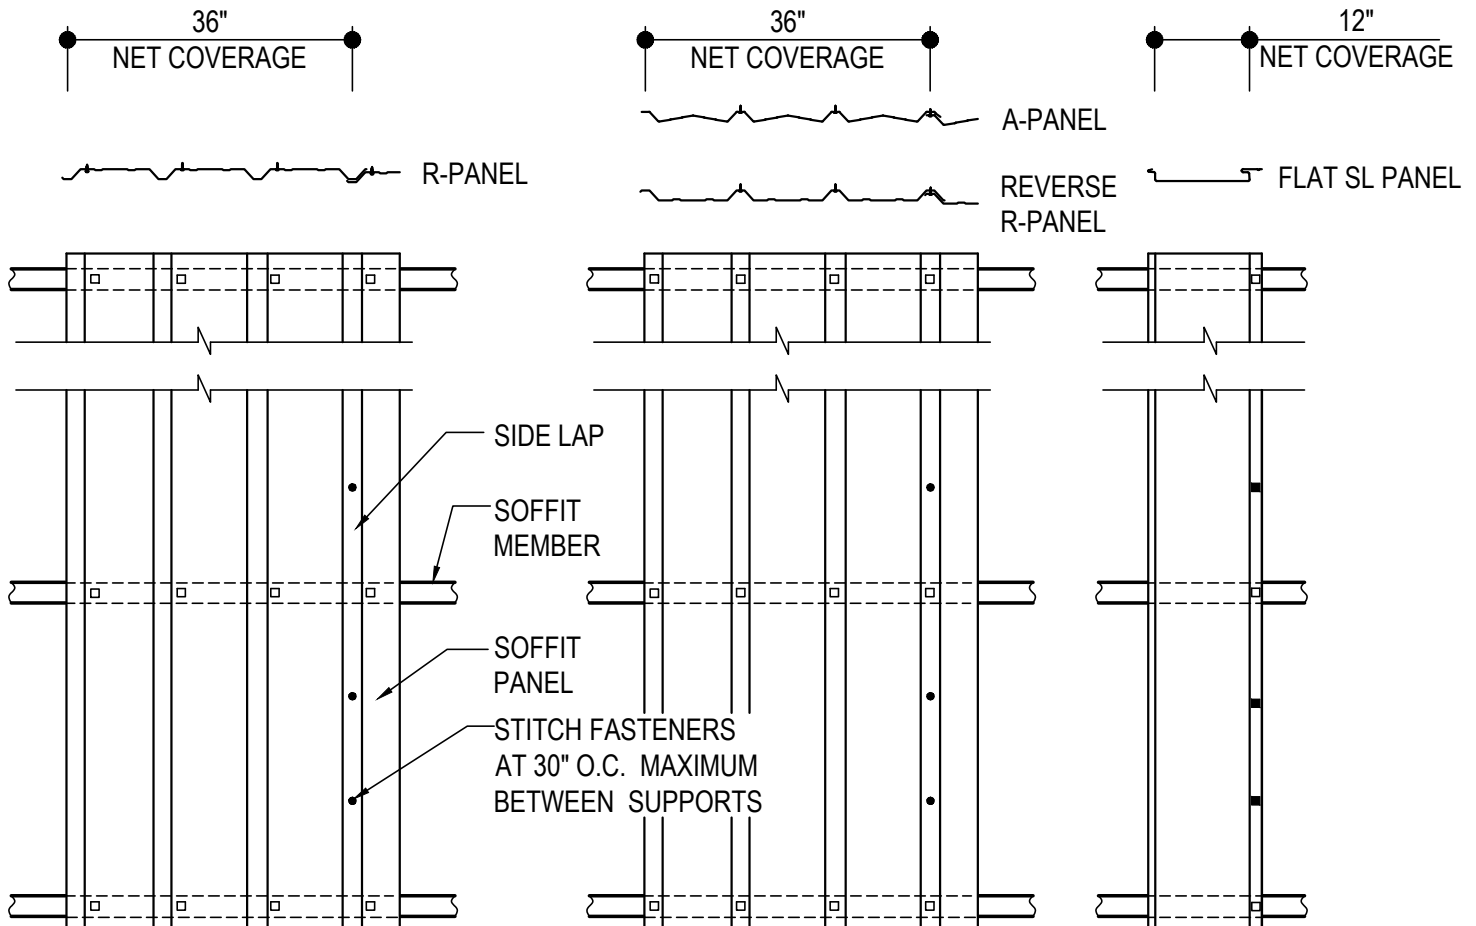

SOFFIT PANEL ERECTION DETAIL


IK0005

Detailer Notes:

- 1) THIS DETAIL IS A DUPLICATE OF DO0005, DQ0005, EO3005, EO6005, EQ3005, EQ6005, & HK0005. DUPLICATE DETAILS ARE TO ENSURE THAT THEY ARE PLACED IN ORDER IN THE ERECTION DRAWINGS.

IK0007 - FLAT SL PANEL ATTACHMENT DETAIL

[Download the DWG file by clicking here.](#)

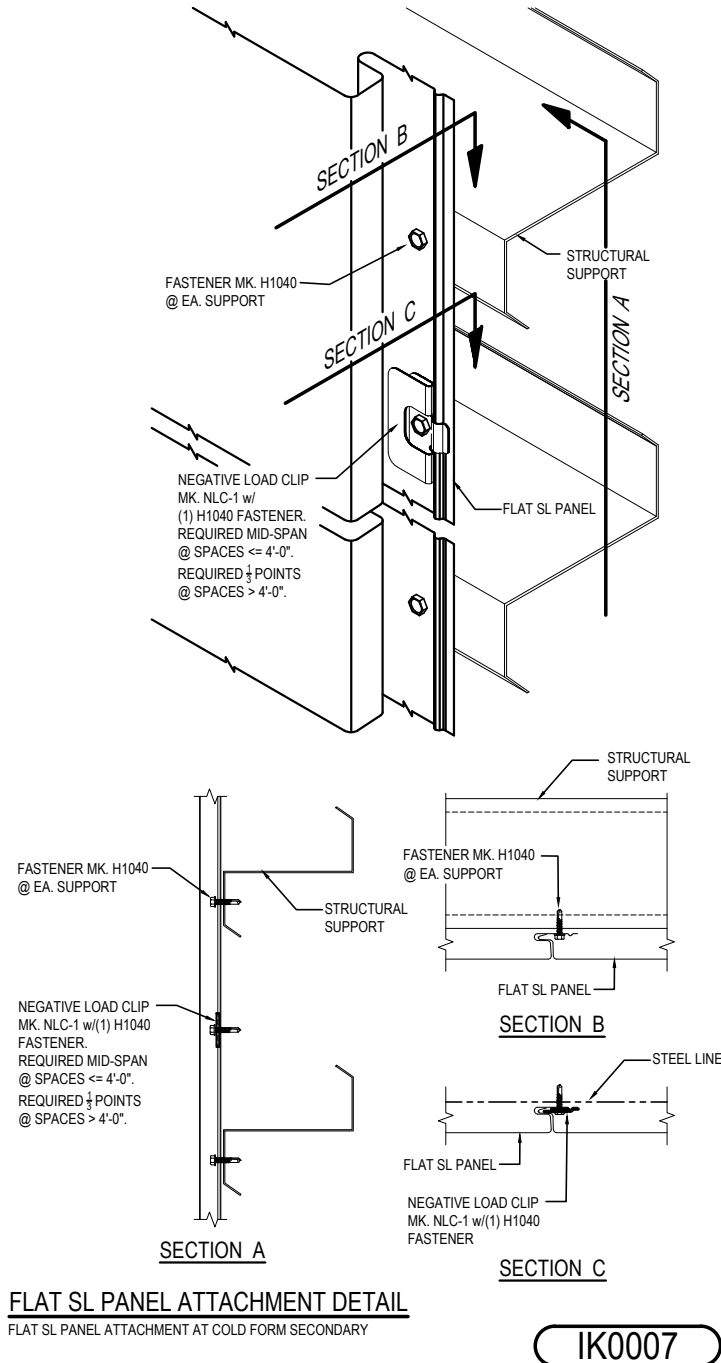

Detailer Notes:



- 1) THIS DETAIL IS A DUPLICATE OF DO0007, DQ0007, EO3007, EO6007, EQ3007, EQ6007, & HK0007. DUPLICATE DETAILS ARE TO ENSURE THAT THEY ARE PLACED IN ORDER IN THE ERECTION DRAWINGS.

IK0010 - HORIZONTAL SOFFIT TERMINATION AT FACE

[Download the DWG file by clicking here.](#)

ERECTOR NOTE:

UNTIL WALL PANELS ARE INSTALLED, (3) H1040 SCREWS ARE TO BE USED FOR TEMPORARY INSTALLATION OF THE EDGE TRIM AND MAR02.

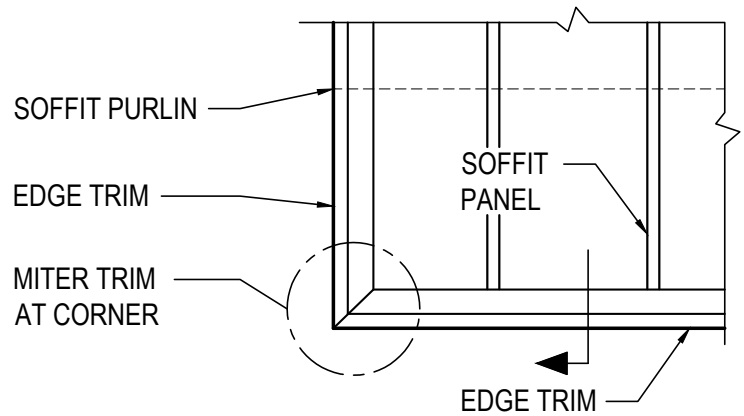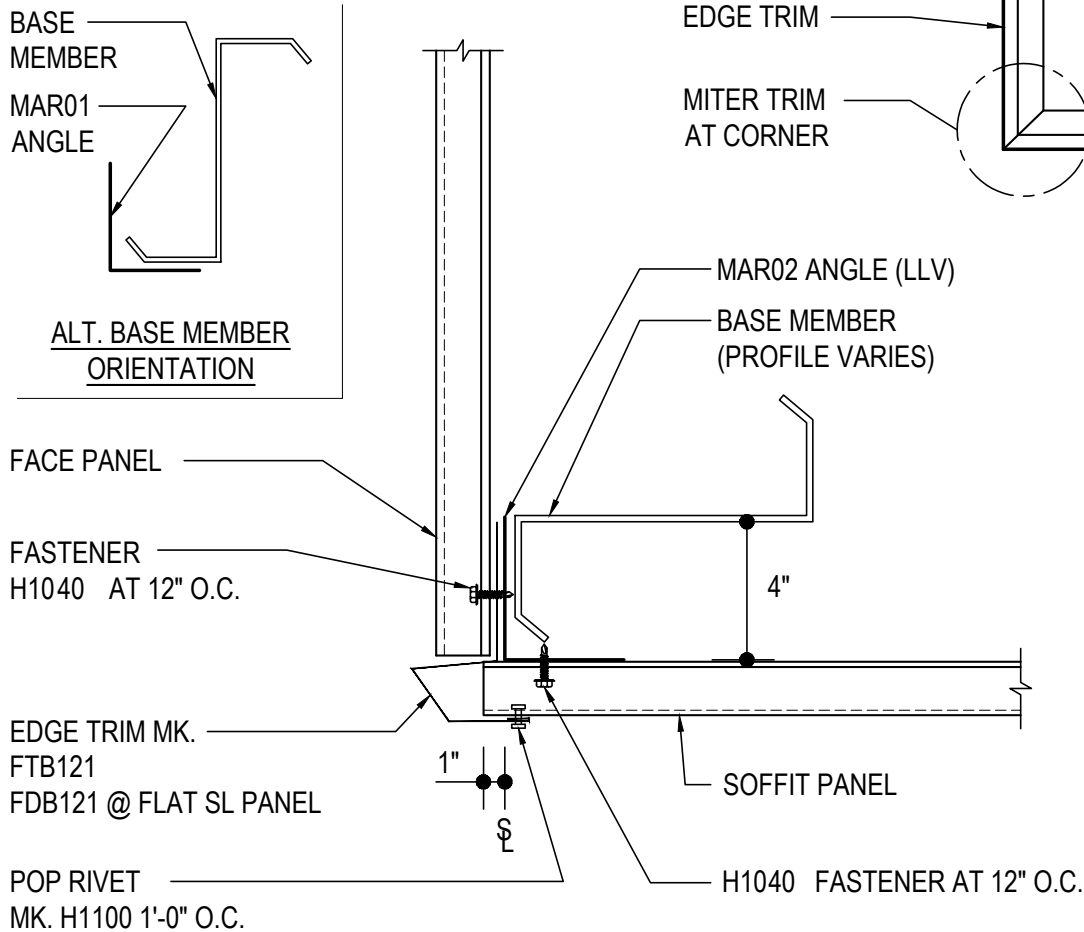

HORIZONTAL SOFFIT TERMINATION AT FACE

SEE WALL PANEL ERECTION NOTES FOR WALL PANEL FASTENER LOCATIONS
SEE SOFFIT PANEL ERECTION NOTE FOR SOFFIT PANEL FASTENER LOCATIONS

IK0010

Detailer Notes:


- 1) N/A

IK0020 - HORIZONTAL SOFFIT TERMINATION AT EDGE

[Download the DWG file by clicking here.](#)

ERECTOR NOTE:

UNTIL WALL PANELS ARE INSTALLED, (3) H1040 SCREWS ARE TO BE USED FOR TEMPORARY INSTALLATION OF THE EDGE TRIM AND MAR02.

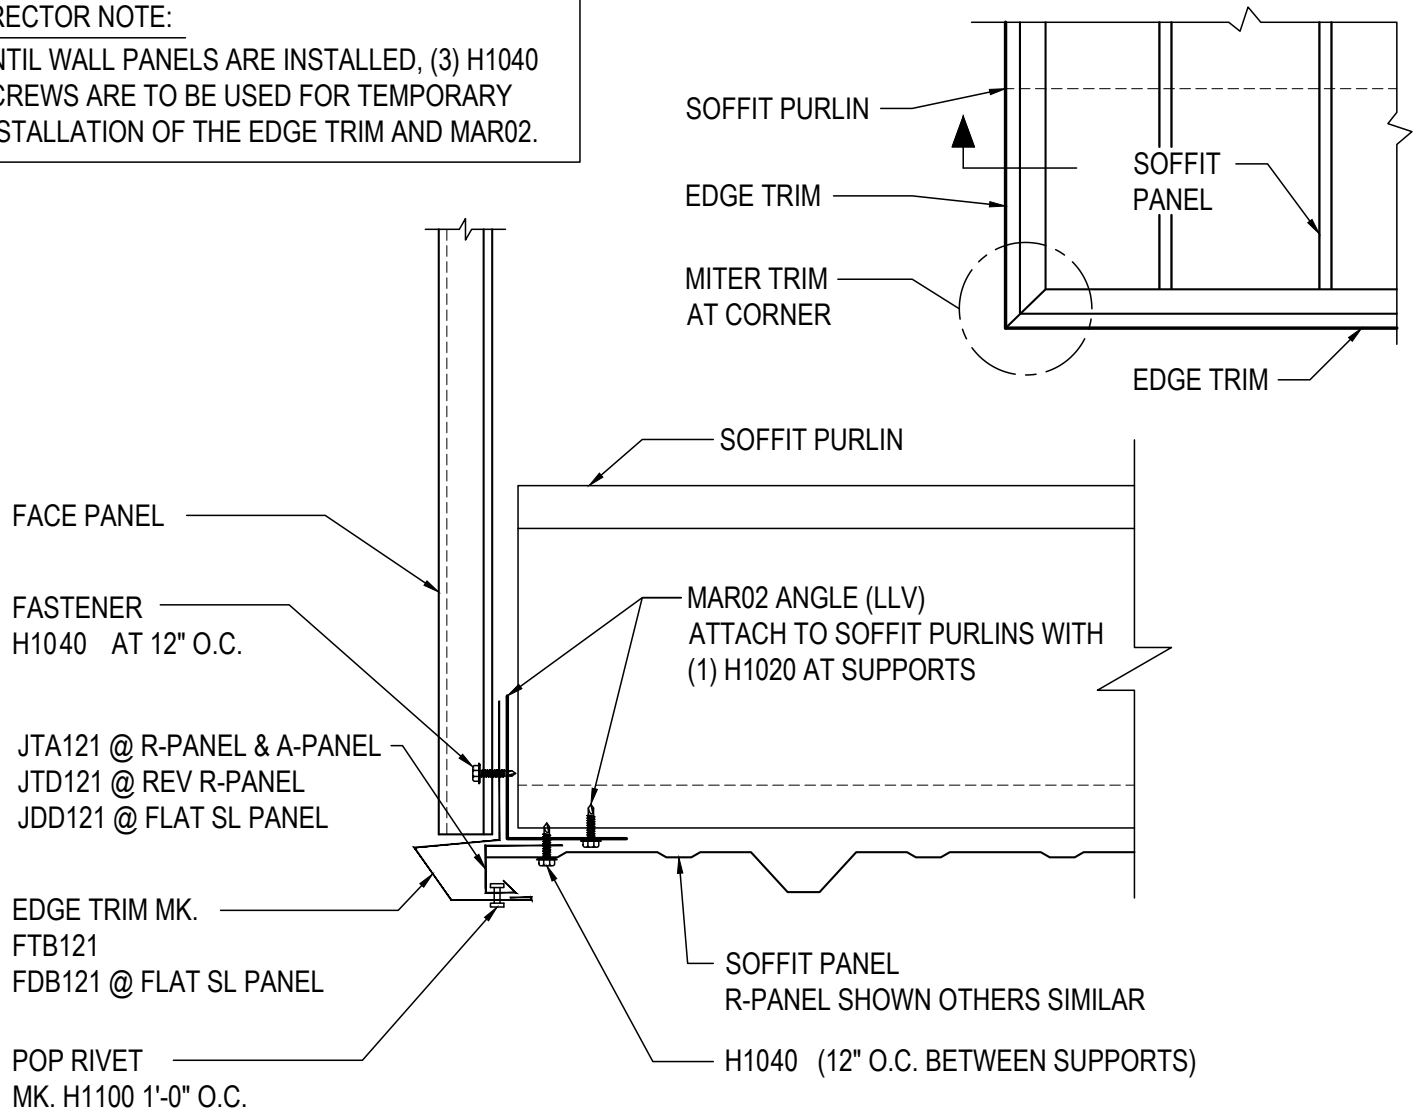

HORIZONTAL SOFFIT TERMINATION AT EDGE

SEE WALL PANEL ERECTION NOTES FOR WALL PANEL FASTENER LOCATIONS
SEE SOFFIT PANEL ERECTION NOTE FOR SOFFIT PANEL FASTENER LOCATIONS


IK0020

Detailer Notes:

1) N/A

IK0030 - HORIZONTAL SOFFIT TERMINATION AT WALL

[Download the DWG file by clicking here.](#)

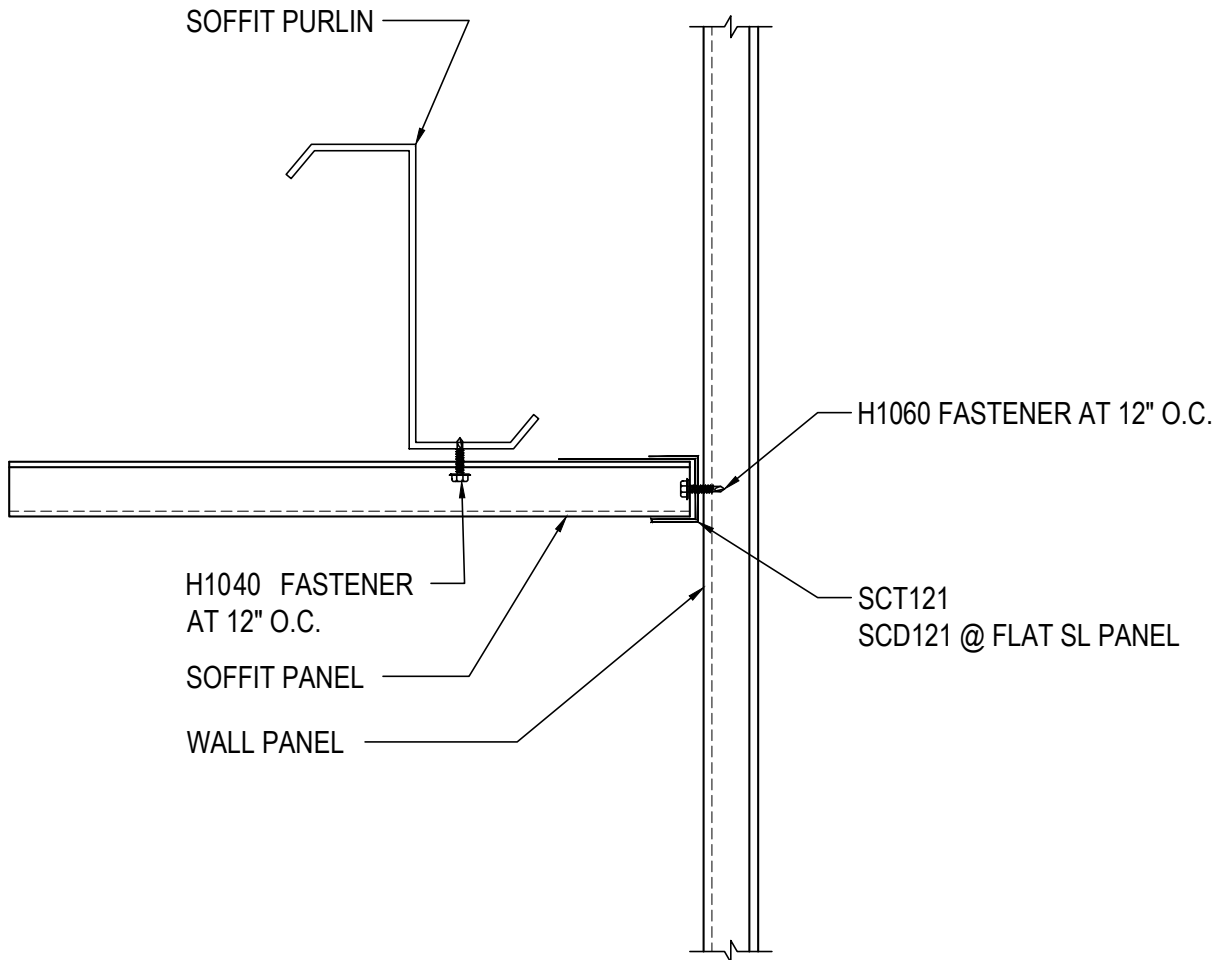

HORIZONTAL SOFFIT TERMINATION AT WALL

SEE WALL PANEL ERECTION NOTES FOR WALL PANEL FASTENER LOCATIONS
SEE SOFFIT PANEL ERECTION NOTE FOR SOFFIT PANEL FASTENER LOCATIONS


Detailer Notes:

1) N/A

IK0030

IK0040 - HORIZONTAL SOFFIT TERMINATION AT MITERED CORNER

[Download the DWG file by clicking here.](#)

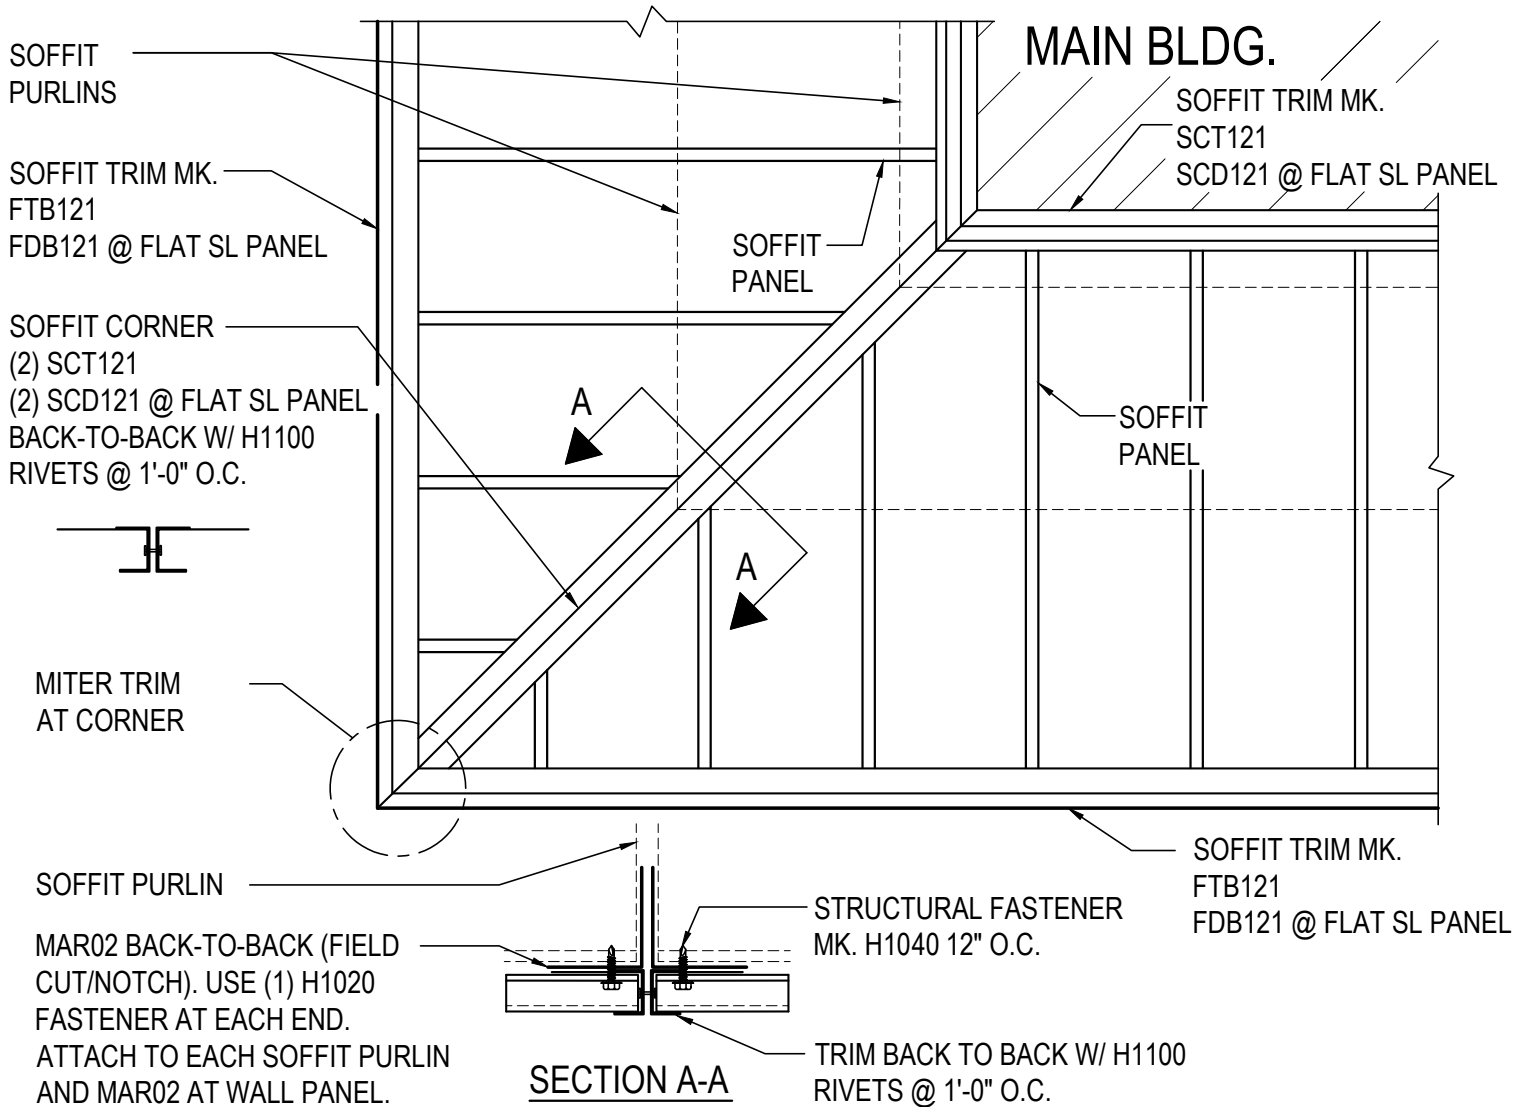

HORIZONTAL SOFFIT TERMINATION AT MITERED CORNER

BOTTOM VIEW

IK0040

Detailer Notes:

1) N/A