

### TABLE OF CONTENTS

### **INSIDE CORNER GIRT CONNECTIONS**

CJ0005 - GIRT TO GIRT DETAIL

CJ1010 - FLUSH FRAMELINE WITH FLUSH GIRTS

CJ1020 - FLUSH FRAMELINE WITH FLUSH & INSET GIRTS

CJ1030 - BYPASS FRAMELINE 1-0 FLUSH GIRT

CJ1040 - BYPASS FRAMELINE 1-1.5 FLUSH GIRT

CJ1050 - BYPASS FRAMELINE 1-4 FLUSH GIRT

CJ1060 - BYPASS FRAMELINE WITH 8 & 9.5 GIRT

CJ1070 - INSET FRAMELINE WITH 8 & 9.5 INSET GIRT

CJ1080 - BYPASS FRAMELINE 1-0 INSET GIRT

CJ1090 - BYPASS FRAMELINE 1-1.5 INSET GIRT

CJ1100 - BYPASS FRAMELINE 1-4 INSET GIRT

CJ1110 - FLUSH FRAMELINE SIMPLE SPAN BYPASS GIRT

CJ1120 - INSET FRAMELINE WITH SIMPLE SPAN BYPASS GIRT

CJ1130 - BYPASS FRAMELINE WITH SIMPLE SPAN BYPASS GIRT

CJ1165 - HOT ROLLED GIRT INTO BYPASS GIRT

CJ1170 - BYPASS GIRT INTO BYPASS GIRT

CJ1220 - BYPASS GIRT INTO BYPASS GIRT

CJ1500 - 8 LAPPED BYPASS GIRT AT 8 INSIDE GIRT

CJ1520 - 8 LAPPED BYPASS GIRT AT 8 INSIDE GIRT

CJ1540 - 9.5 LAPPED BYPASS GIRT INTO 8 INSIDE GIRT


CJ1560 - 9.5 LAPPED BYPASS GIRT INTO 9.5 INSIDE GIRT



**WALL SECONDARY** 

### CJ0005 - GIRT TO GIRT DETAIL

Download the DWG file by clicking here.

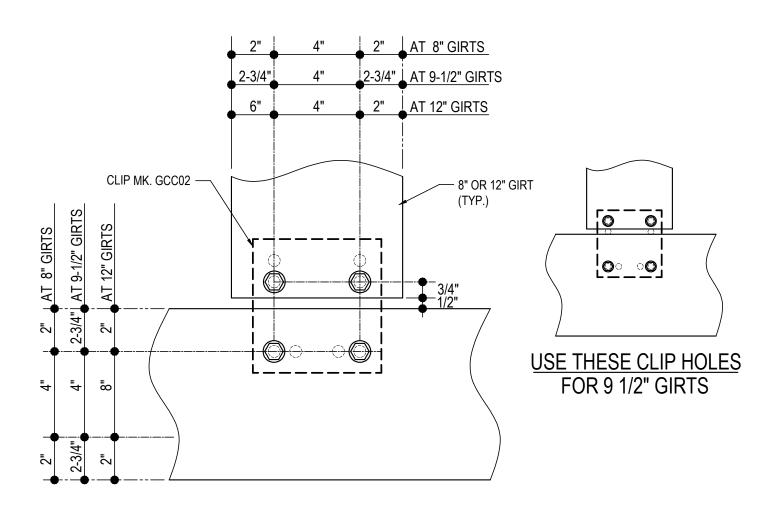

# GIRT TO GIRT DETAIL

GIRT TO GIRT CONNECTION DETAIL

NOTE: USE (4) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400

REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

CJ0005

**Detailer Notes:** 

1) N/A

Issued : 06.28.22 (MR2022.07) CERTIFIED ERECTION DETAILS Detail Size (W x H) : 1 x 1


Issued By: BSS





**WALL SECONDARY** 


### CJ1010 - FLUSH FRAMELINE WITH FLUSH GIRTS

Download the DWG file by clicking here.

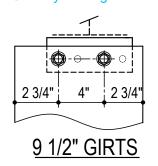

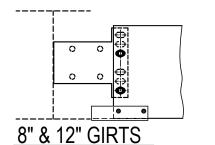

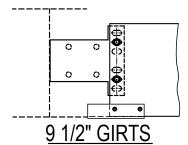

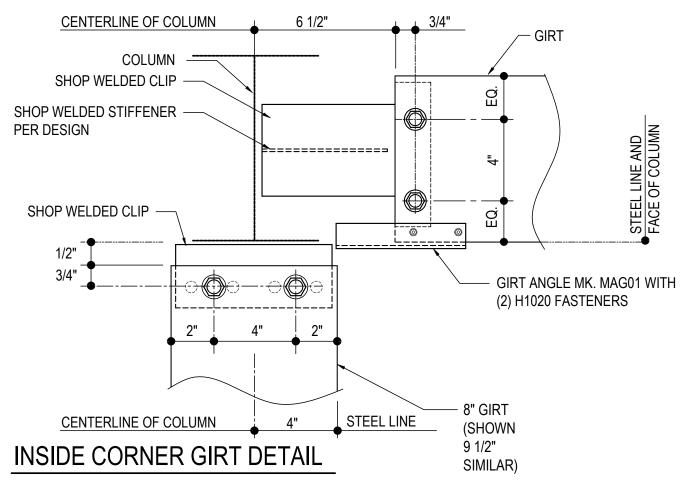

FLUSH FRAMELINE WITH FLUSH GIRTS

NOTE: USE (4) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400

REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

CJ1010

Detail Size (W x H): 1 x 1

### Detailer Notes:

1) WELDED "T" CLIP TO COLUMN: GFI02

2) (2) HOLE WELDED CLIP TO COLUMN FOR 8" GIRT: GRC03

3) (2) HOLE WELDED CLIP TO COLUMN FOR 9 1/2" GIRT: GRC09

4) ADD STIFFENER PER DESIGN TO WELDED "T" CLIP: WS\_04

Issued : 06.13.23 (MR2023.07)


Issued By: WME





**WALL SECONDARY** 


### CJ1020 - FLUSH FRAMELINE WITH FLUSH & INSET GIRTS

Download the DWG file by clicking here.

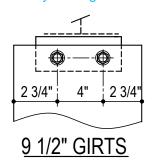

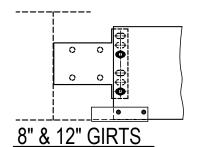

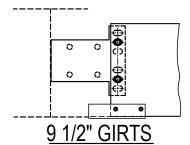

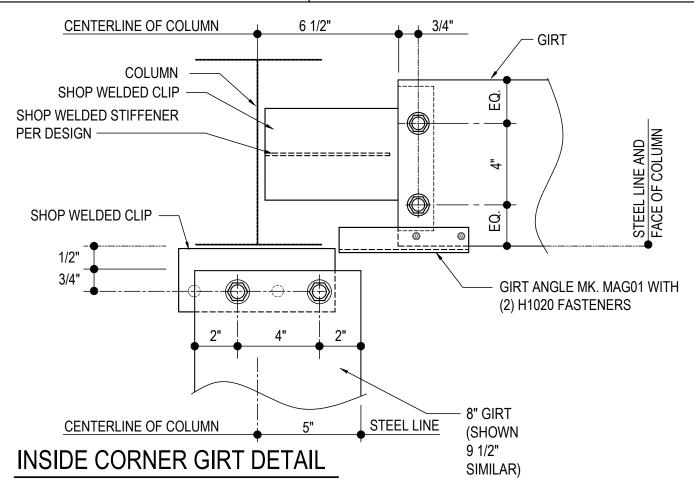

FLUSH FRAMELINE WITH FLUSH & INSET GIRTS

NOTE: USE (4) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400

REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

CJ1020

### **Detailer Notes:**

1) WELDED "T" CLIP TO COLUMN: GFI02

2) (2) HOLE WELDED CLIP TO COLUMN FOR 8" GIRT: GRC09

3) (2) HOLE WELDED CLIP TO COLUMN FOR 9 1/2" GIRT: GRC03

4) ADD STIFFENER PER DESIGN TO WELDED "T" CLIP: WS 04

Issued: 06.13.23 (MR2023.07) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1


Issued By: WME




**WALL SECONDARY** 

### CJ1030 - BYPASS FRAMELINE (1'-0") WITH FLUSH GIRT

Download the DWG file by clicking here.

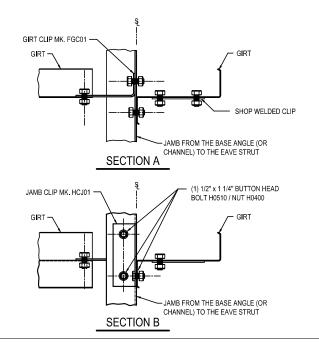

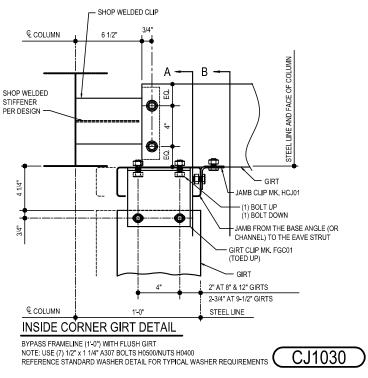

### **Detailer Notes:**


1) WELDED CLIP TO COLUMN: GFI02 2) ADD STIFFENER PER DESIGN: WS\_04




**WALL SECONDARY** 

### CJ1040 - BYPASS FRAMELINE (1'-1 1/2") WITH FLUSH GIRT

Download the DWG file by clicking here.

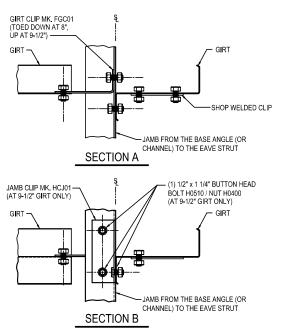

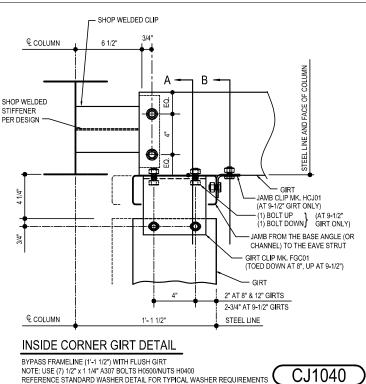

### **Detailer Notes:**

1) WELDED CLIP TO COLUMN: GFI02 2) ADD STIFFENER PER DESIGN: WS\_04


Issued: 08.16.19 (2019.003) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 2




**WALL SECONDARY** 

### CJ1050 - BYPASS FRAMELINE (1'-4") WITH FLUSH GIRT

Download the DWG file by clicking here.

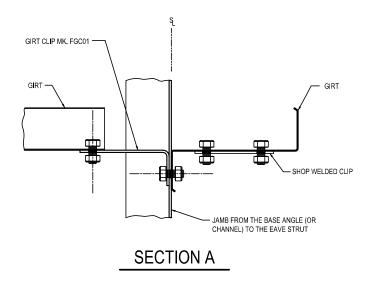

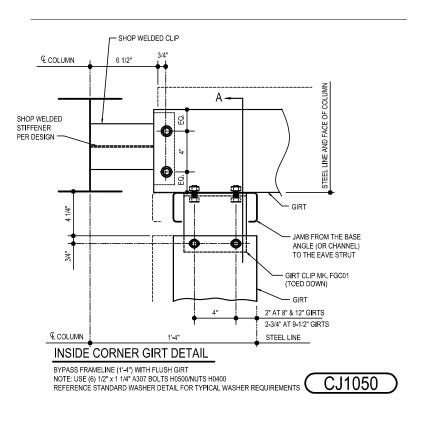

### **Detailer Notes:**

1) WELDED CLIP TO COLUMN: GFI02 2) ADD STIFFENER PER DESIGN: WS\_04


Issued: 08.16.19 (2019.003) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 2



**WALL SECONDARY** 

#### CJ1060 - FLUSH FRAMELINE WITH 8" & 9-1/2" INSET GIRT

Download the DWG file by clicking here.

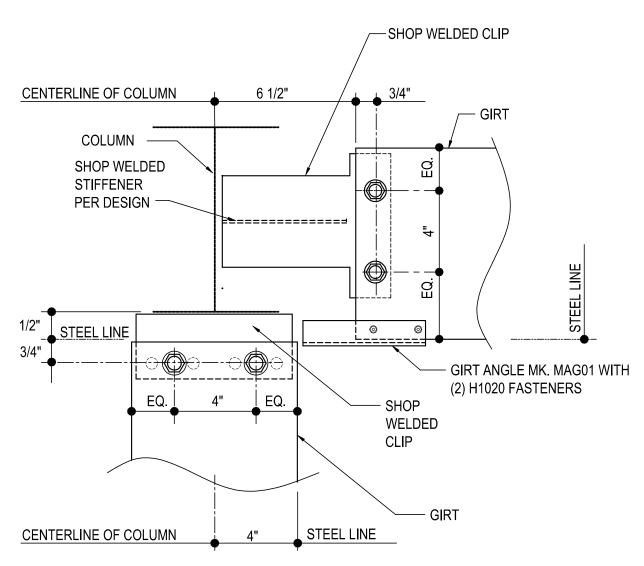

### INSIDE CORNER GIRT DETAIL

FLUSH FRAMELINE WITH 8" / 9-1/2" INSET GIRT

NOTE: USE (4) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400

REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

CJ1060

### **Detailer Notes:**

1) T- CLIP WELDED TO COLUMN: GFI02

2) (2) HOLE WELDED CLIP 8" GIRT: GRC03

3) (2) HOLE WELDED CLIP 9 1/2" GIRT: GRC09

4) ADD STIFFENER TO T-CLIP PER DESIGN: WS 04


Issued : 08.16.19 (2019.003) **CERTIFIED ERECTION DETAILS** Detail Size (W x H) : 1 x 1



**WALL SECONDARY** 

#### CJ1070 - INSET FRAMELINE WITH 8" & 9-1/2" INSET GIRT

Download the DWG file by clicking here.

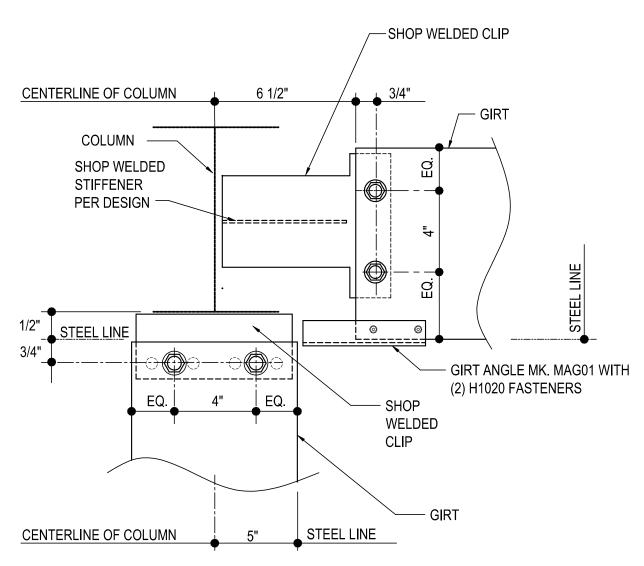

### INSIDE CORNER GIRT DETAIL

INSET FRAMELINE WITH 8" / 9-1/2" INSET GIRT

NOTE: USE (4) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400

REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

CJ1070

### **Detailer Notes:**

1) T- CLIP WELDED TO COLUMN: GFI02

2) (2) HOLE WELDED CLIP 8" GIRT: GRC09

3) (2) HOLE WELDED CLIP 9 1/2" GIRT: GRC03


4) ADD STIFFENER TO T-CLIP PER DESIGN: WS\_04




**WALL SECONDARY** 

### CJ1080 - BYPASS FRAMELINE (1'-0") WITH INSET GIRT

Download the DWG file by clicking here.

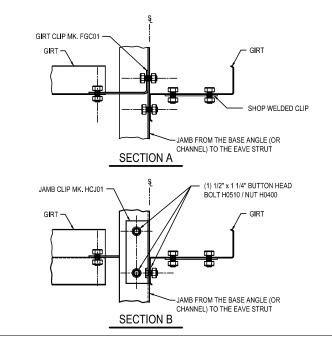

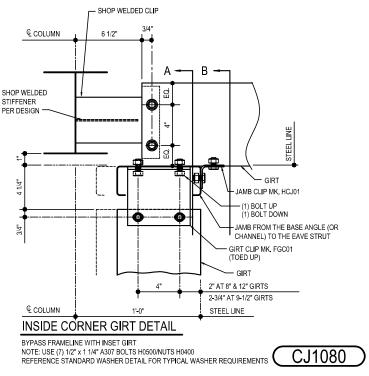

### **Detailer Notes:**

1) WELDED CLIP TO COLUMN: GFI02 2) ADD STIFFENER PER DESIGN: WS\_04


Issued: 08.16.19 (2019.003) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 2




**WALL SECONDARY** 

### CJ1090 - BYPASS FRAMELINE (1'-1 1/2") WITH INSET GIRT

Download the DWG file by clicking here.

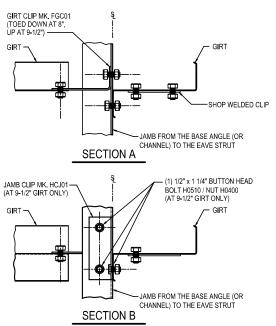

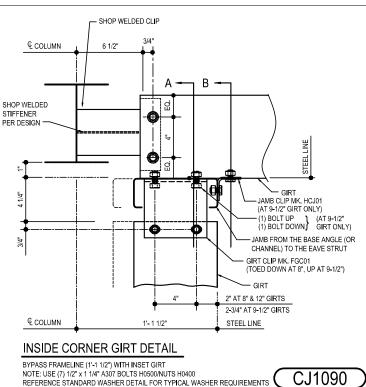

### **Detailer Notes:**

1) WELDED CLIP TO COLUMN: GFI02 2) ADD STIFFENER PER DESIGN: WS\_04


Issued: 08.16.19 (2019.003) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 2




**WALL SECONDARY** 

### CJ1100 - BYPASS FRAMELINE (1'-4") WITH INSET GIRT

Download the DWG file by clicking here.

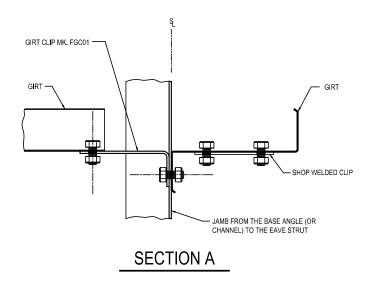

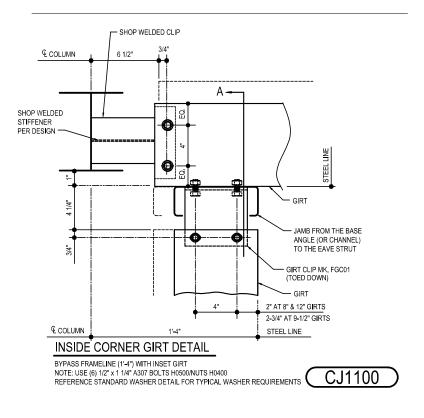

### **Detailer Notes:**

1) WELDED CLIP TO COLUMN: GFI02 2) ADD STIFFENER PER DESIGN: WS\_04

Issued: 08.16.19 (2019.003) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 2




**WALL SECONDARY** 

Detail Size (W x H): 1 x 2

#### CJ1110 - FLUSH FRAMELINE WITH SIMPLE SPAN BYPASS GIRT

Download the DWG file by clicking here.

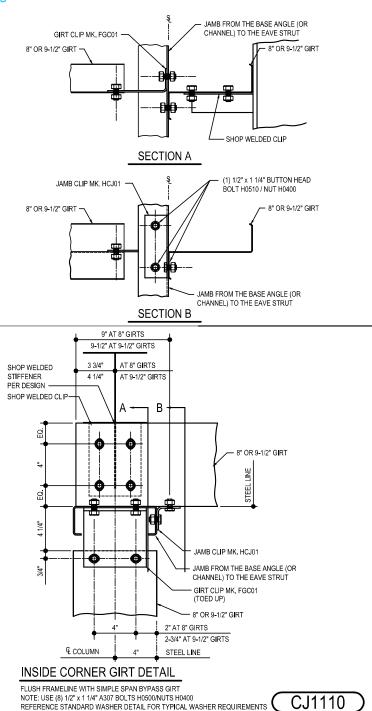

#### **Detailer Notes:**

1) (4) HOLE WELDED CLIP TO COLUMN:

8" - PCU01 9 1/2" - GCB62

9 1/2" - GCB62 12" - GCB12 2) ADD STIFFENER PER DESIGN:

8" GIRT: WS\_04 9 1/2" GIRT: WS\_04 12" GIRT: WS\_12

Issued: 08.16.19 (2019.003)

Issued By: EGB

**CERTIFIED ERECTION DETAILS** 




**WALL SECONDARY** 

Detail Size (W x H): 1 x 2

#### CJ1120 - INSET FRAMELINE WITH SIMPLE SPAN BYPASS GIRT

Download the DWG file by clicking here.

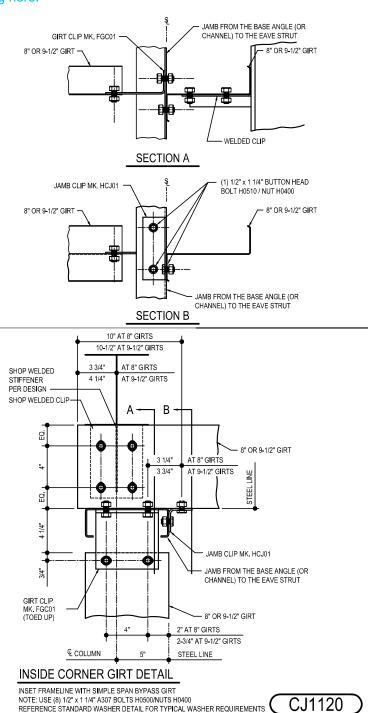

#### **Detailer Notes:**

1) (4) HOLE WELDED CLIP TO COLUMN:

8" - PCU01 9 1/2" - GCB62

9 1/2" - GCB62 12" - GCB12 2) ADD STIFFENER PER DESIGN:

8" GIRT: WS\_04 9 1/2" GIRT: WS\_04 12" GIRT: WS\_12

Issued: 08.16.19 (2019.003)





**WALL SECONDARY** 

Detail Size (W x H): 1 x 2

### CJ1130 - BYPASS FRAMELINE WITH SIMPLE SPAN BYPASS GIRT

Download the DWG file by clicking here.

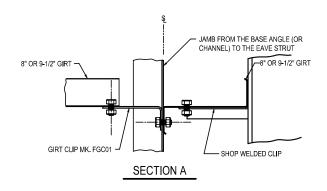

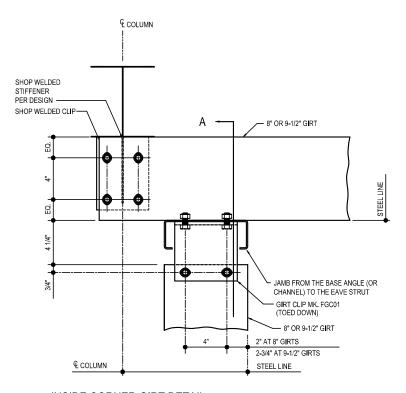

### INSIDE CORNER GIRT DETAIL

BYPASS FRAMELINE WITH SIMPLE SPAN BYPASS GIRT
NOTE: USE (8) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400
REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

CJ1130

### **Detailer Notes:**

1) (4) HOLE WELDED CLIP TO COLUMN:

8" - PCU01

9 1/2" - GCB62 12" - GCB12 2) ADD STIFFENER PER DESIGN:

8" GIRT: WS\_04 9 1/2" GIRT: WS\_04 12" GIRT: WS\_12


Issued: 08.16.19 (2019.003)



WALL SECONDARY

#### CJ1165 - HOT ROLLED GIRT INTO BYPASS GIRT

Download the DWG file by clicking here.

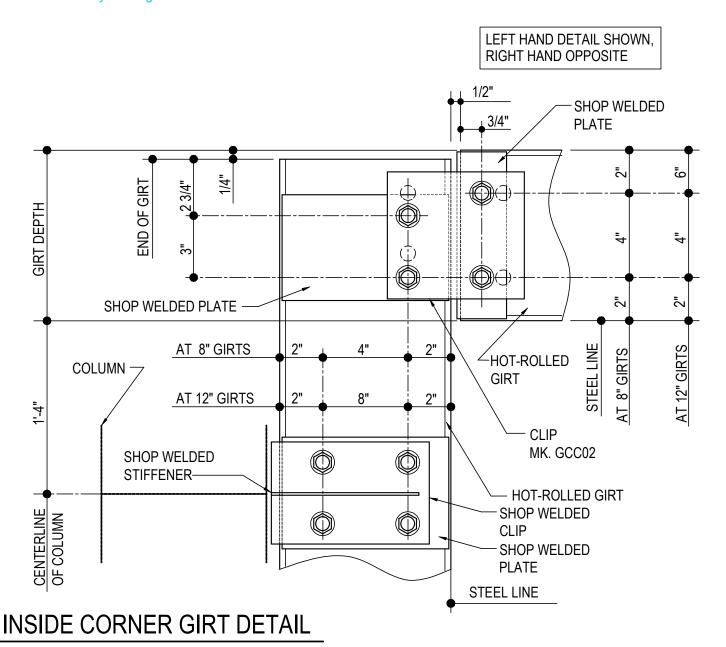

HOT ROLLED GIRT INTO BYPASS GIRT

NOTE: USE (8) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400

REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

CJ1165

### **Detailer Notes:**

1) (4) HOLE WELDED CLIP TO COLUMN:

8" - GCM04

12"- GCB12

2) (4) HOLE PLATE WELDED TO HR GIRT:

8" - HCD08 / 12" - HCD12

3) (2) HOLE WELDED CLIP TO HR GIRT:

8" - HCS08 / 12" - HCS12

4) SHOP WELDED STIFFENER:

8" - GCM04 STIFFENER: WS\_04

12" - GCB12 STIFFENER: WS 12

Revised: 01.25.21 (MR2021.02) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1


Revised By: SDF



WALL SECONDARY

#### CJ1170 - BYPASS GIRT INTO BYPASS GIRT

Download the DWG file by clicking here.

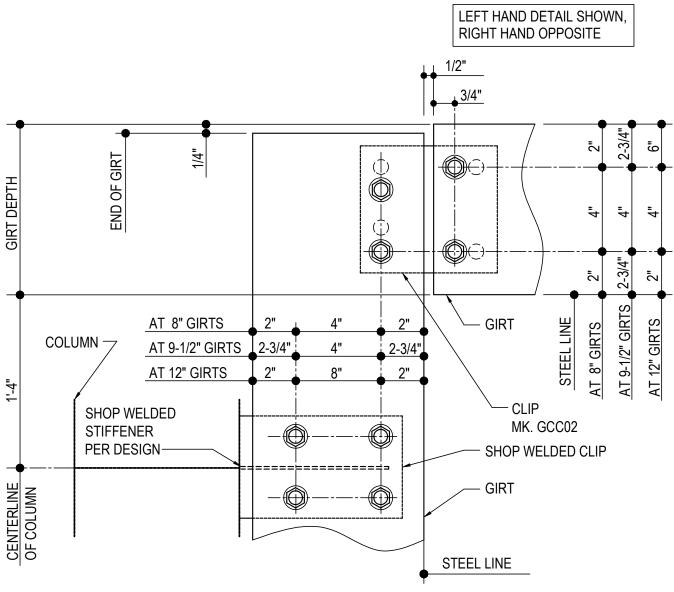

# INSIDE CORNER GIRT DETAIL

BYPASS GIRT INTO BYPASS GIRT

NOTE: USE (8) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400

REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

CJ1170

### **Detailer Notes:**

1) SHOP WELDED CLIP: 8" GIRT = PCU01 9-1/2" GIRT = GCB62 12" GIRT = GCB12 2) ADD STIFFENER PER DESIGN:

8" GIRT: WS\_04 9 1/2" GIRT: WS\_04 12" GIRT: WS\_12

Issued : 05.24.23 (MR2023.06) CERTIFIED ERECTION DETAILS Detail Size (W x H) : 1 x 1

Issued By: WME




**WALL SECONDARY** 

#### CJ1220 - BYPASS GIRT INTO BYPASS GIRT

Download the DWG file by clicking here.

RIGHT HAND DETAIL SHOWN. LEFT HAND OPPOSITE

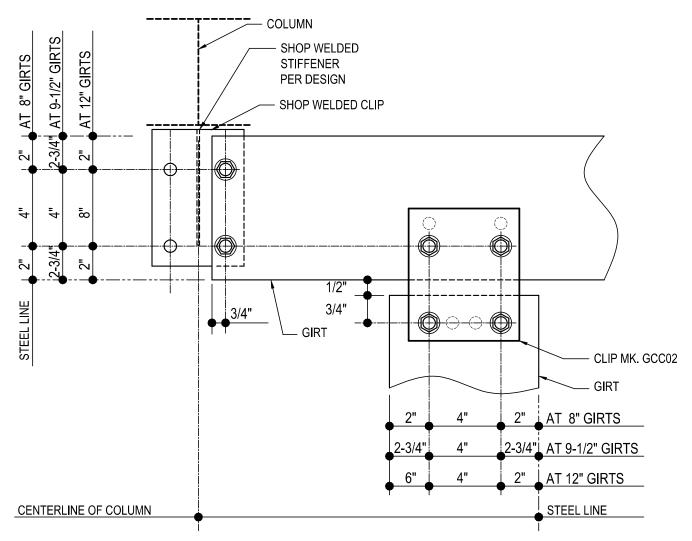

# INSIDE CORNER GIRT DETAIL

BYPASS GIRT INTO BYPASS GIRT

NOTE: USE (6) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400

REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

CJ1220

### **Detailer Notes:**

1) SHOP WELDED CLIP TO COLUMN:

8" - PCU01 9 1/2" - GCB62

9 1/2" GIRT: WS 04 12" GIRT: WS\_12 12" - GCB12

Issued : 08.16.19 (2019.003)

Issued By: EGB

**CERTIFIED ERECTION DETAILS** 

8" GIRT: WS 04

2) ADD STIFFENER PER DESIGN:

Detail Size (W x H): 1 x 1




**WALL SECONDARY** 

#### CJ1500 - 8" LAPPED BYPASS GIRT AT 8" INSIDE CORNER GIRT

Download the DWG file by clicking here.

USE (1) 1/2" X 1 1/4" BUTTON HEAD BOLT H0510 / NUT \*\* H0400 AT THIS LOCATION. REFER TO THE "LAPPED GIRT DETAIL" FOR ADDITIONAL INFORMATION.

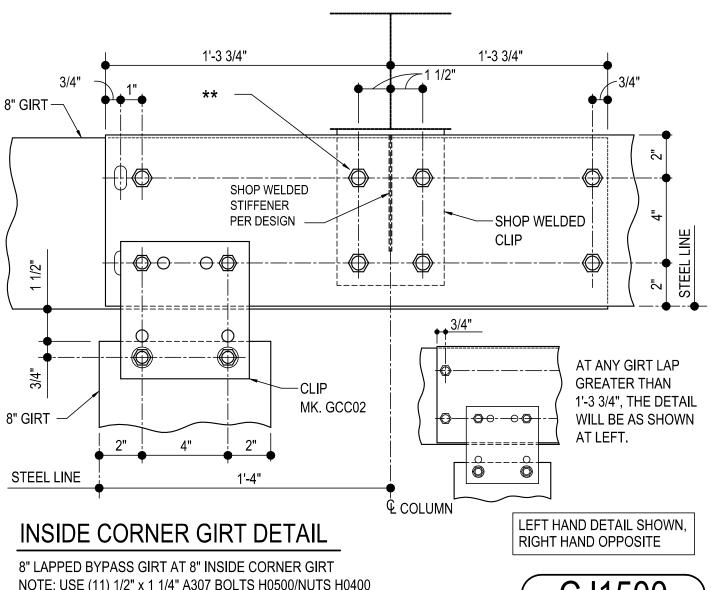

NOTE: USE (11) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400 REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

CJ1500

### **Detailer Notes:**

1) SHOP WELDED CLIP: 8" GIRT = PCU01 2) ADD STIFFENER PER DESIGN: WS\_04

Issued : 08.16.19 (2019.003) **CERTIFIED ERECTION DETAILS** Detail Size (W x H): 1 x 1




**WALL SECONDARY** 

CJ1520 - 8" LAPPED BYPASS GIRT AT 9-1/2" INSIDE CORNER GIRT (SHOP WELDED CLIP)

Download the DWG file by clicking here.

\*\* USE (1) 1/2" X 1 1/4" BUTTON HEAD BOLT H0510 / NUT H0400 AT THIS LOCATION. REFER TO THE "LAPPED GIRT DETAIL" FOR ADDITIONAL INFORMATION.

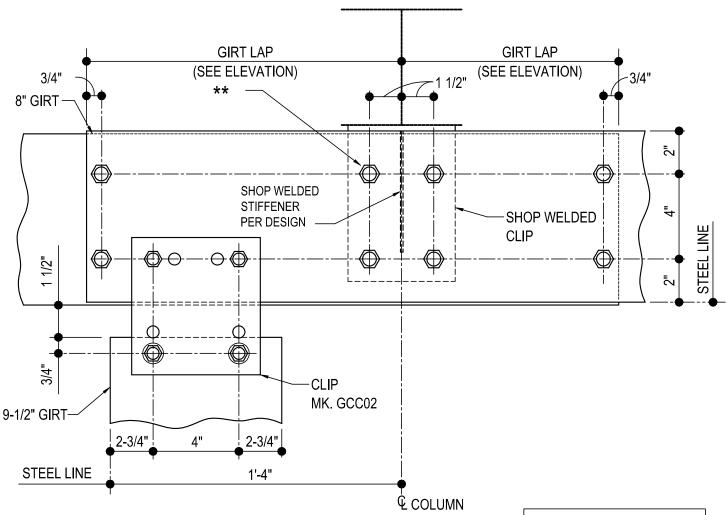

# INSIDE CORNER GIRT DETAIL

8" LAPPED BYPASS GIRT AT 9-1/2" INSIDE CORNER GIRT NOTE: USE (11) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400 REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

LEFT HAND DETAIL SHOWN, RIGHT HAND OPPOSITE

CJ1520

### **Detailer Notes:**

1) SHOP WELDED CLIP: 8" GIRT = PCU01 2) ADD STIFFENER PER DESIGN: WS\_04

Issued: 08.16.19 (2019.003) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1




**WALL SECONDARY** 

CJ1540 - 9-1/2" LAPPED BYPASS GIRT AT 8" INSIDE CORNER GIRT (SHOP WELDED CLIP)

Download the DWG file by clicking here.

\*\* USE (1) 1/2" X 1 1/4" BUTTON HEAD BOLT H0510 / NUT H0400 AT THIS LOCATION. REFER TO THE "LAPPED GIRT DETAIL" FOR ADDITIONAL INFORMATION.

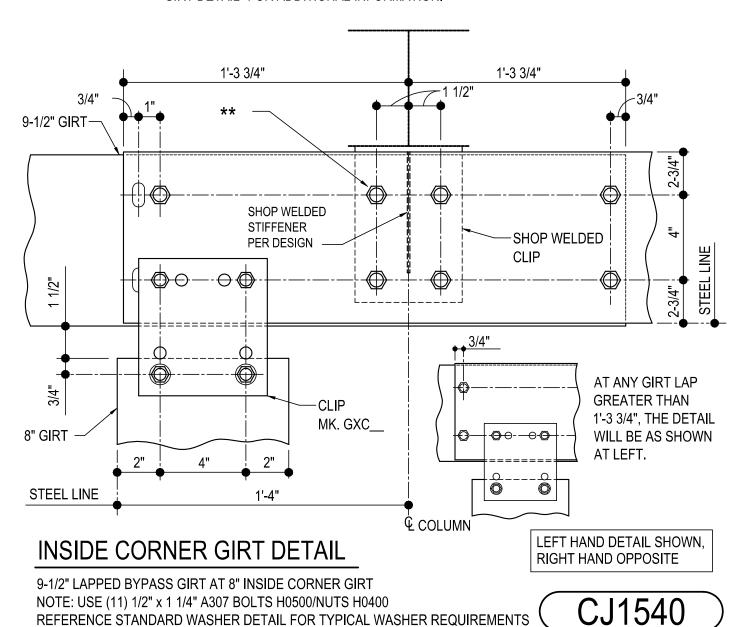

THE ETTEROE

1) SHOP WELDED CLIP: 9-1/2" GIRT = GCB62

2) ADD STIFFENER PER DESIGN: WS\_04

Issued : 08.16.19 (2019.003) **CERTIFIED ERECTION DETAILS** Detail Size (W x H) : 1 x 1

Issued By: EGB

**Detailer Notes:** 




**WALL SECONDARY** 

CJ1560 - 9-1/2" LAPPED BYPASS GIRT AT 9-1/2" INSIDE CORNER GIRT (SHOP WELDED CLIP)

Download the DWG file by clicking here.

\*\* USE (1) 1/2" X 1 1/4" BUTTON HEAD BOLT H0510 / NUT H0400 AT THIS LOCATION. REFER TO THE "LAPPED GIRT DETAIL" FOR ADDITIONAL INFORMATION.

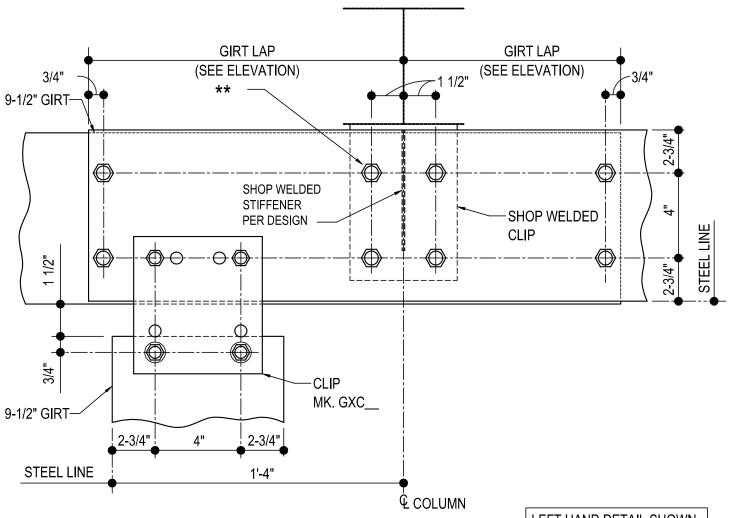

# INSIDE CORNER GIRT DETAIL

9-1/2" LAPPED BYPASS GIRT AT 9-1/2" INSIDE CORNER GIRT NOTE: USE (11) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400 REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

LEFT HAND DETAIL SHOWN, RIGHT HAND OPPOSITE

CJ1560

### **Detailer Notes:**

1) SHOP WELDED CLIP: 9-1/2" GIRT = GCB62

2) ADD STIFFENER PER DESIGN: WS\_04

Issued: 08.16.19 (2019.003) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1