

#### TABLE OF CONTENTS

#### **LOW EAVE**

BA0010 - LOW EAVE STRUT FLUSH\_INSET SW GIRT AT INTERIOR FRAME 2 BOLT

BA0020 - LOW EAVE STRUT BYPASS SW GIRT AT INTERIOR FRAME 2 BOLT

BA0025 - LOW EAVE STRUT TERMINATION BYPASS SW GIRT 2 BOLT

BA0030 - LOW EAVE STRUT BYPASS SW 2 BOLT

BA0040 - LOW EAVE STRUT FLUSH\_INSET SW GIRT AT ENDWALL FRAME 2 BOLT

BA0050 - LOW EAVE STRUT CF EW 2 BOLT

BA0060 - LOW EAVE STRUT FLUSH INSET SW GIRT WITH STRUT PLATE 4 BOLT

BA0070 - LOW EAVE STRUT BYPASS SW GIRT WITH STRUT PLATE 4 BOLT

BA0080 - LOW EAVE STRUT BYPASS SW GIRT AT ENDWALL FRAME 4 BOLT

BA0090 - LOW EAVE FLUSH\_INSET SW GIRT AT RIGID FRAME ENDWALL 4 BOLT

BA0100 - LOW EAVE STRUT CF EW 4 BOLT

BA0115 - LOW EAVE STRUT FLUSH\_INSET AT COLUMN AND ROOF JOIST DETAIL

BA0125 - LOW EAVE STRUT AT ENDWALL RAFTER WITH ROOF JOISTS DETAIL

BA0140 - CEE PURLIN CONNECTION AT CANOPY

BA0145 - CEE PURLIN TERMINATION AT CANOPY

BA0200 - EAVE STRUT AT STRUCTURAL EXPANSION DETAIL

BA0340 - EAVE ANGLE ATTACHMENT


BA2000 - EAVE ZEE MEMBER FOR R-Boost™



**ROOF SECONDARY** 

BA0010 - LOW EAVE STRUT FLUSH/INSET SW GIRT AT INTERIOR FRAME DETAIL

Download the DWG file by clicking here.

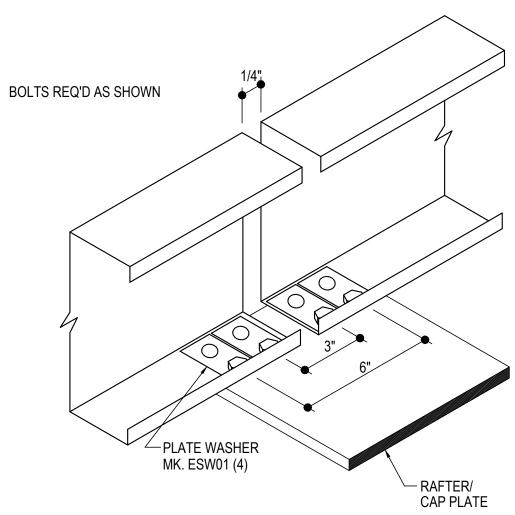

### EAVE STRUT AT INTERIOR FRAME

LOW EAVE FLUSH/INSET SW GIRT CONDITION USE (4) 1/2" X 2" A325 BOLT H0603/NUT H0300 U.N.O.

BA0010

**Detailer Notes:** 

1) 8" MIN. CAP PLATE


Issued : 08.16.19 (2018.017) **CERTIFIED ERECTION DETAILS** Detail Size (W x H) : 1 x 1



**ROOF SECONDARY** 

BA0020 - LOW EAVE STRUT BYPASS SW GIRT AT INTERIOR FRAME DETAIL

Download the DWG file by clicking here.

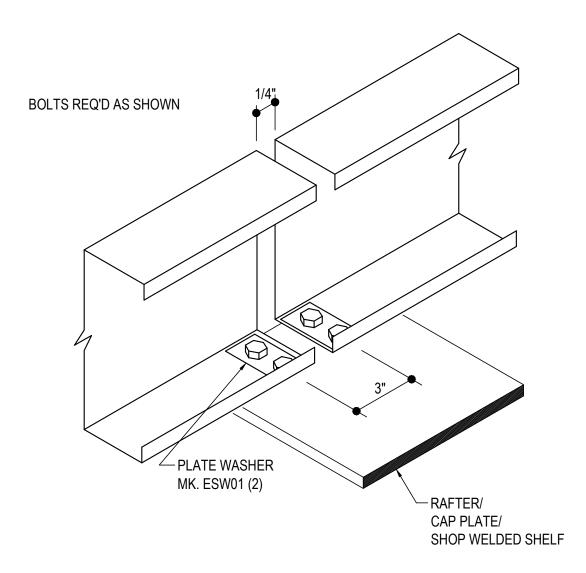

### EAVE STRUT AT INTERIOR FRAME

LOW EAVE BYPASS SW GIRT CONDITION USE (4) 1/2" X 2" A325 BOLT H0603/NUT H0300 U.N.O.

(BA0020)

**Detailer Notes:** 

1) N/A


Issued : 08.16.19 (2018.017) **CERTIFIED ERECTION DETAILS** Detail Size (W x H) : 1 x 1



**ROOF SECONDARY** 

BA0025 - LOW EAVE STRUT TERMINATION BYPASS SW GIRT DETAIL

Download the DWG file by clicking here.

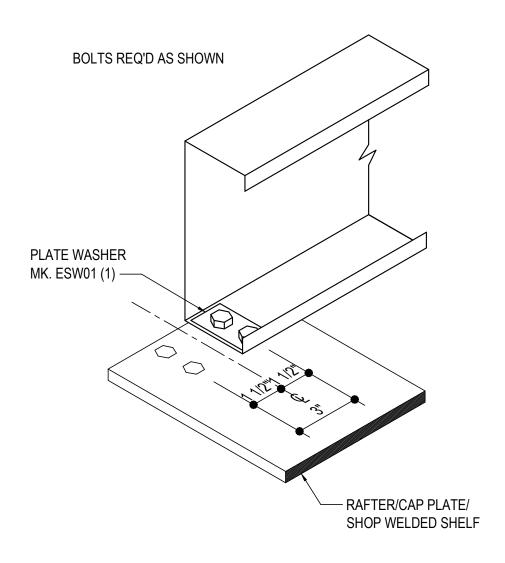

### **EAVE STRUT TERMINATION**

LOW EAVE BYPASS SW GIRT CONDITION USE (2) 1/2" X 2" A325 BOLT H0603/NUT H0300 U.N.O.

BA0025

**Detailer Notes:** 

1) N/A

Issued: 08.16.19 (2018.017) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1




**ROOF SECONDARY** 

#### BA0030 - LOW EAVE STRUT BYPASS SW DETAIL

Download the DWG file by clicking here.

#### **BOLTS REQ'D ONLY AS SHOWN**

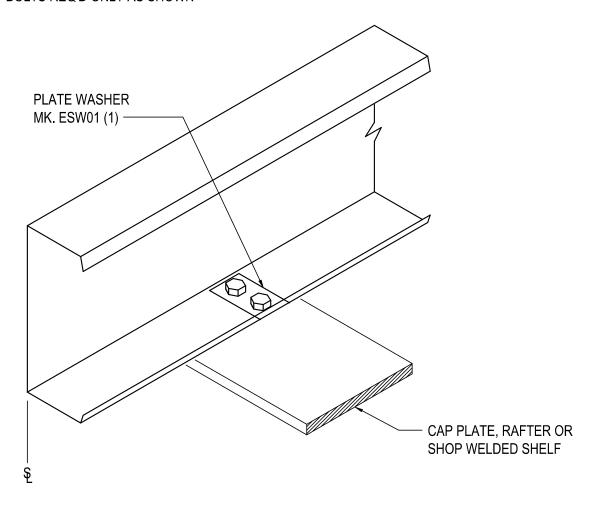

# **EAVE STRUT**

BYPASS SIDEWALL CONDITION USE (2) 1/2" x 2" A325 BOLT H0603/NUT H0300 U.N.O.

(BA0030)

**Detailer Notes:** 

1) N/A

Issued: 10.28.20 (MR2020.11) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1


Issued By: KMC



**ROOF SECONDARY** 

BA0040 - LOW EAVE STRUT FLUSH/INSET SW GIRT AT ENDWALL FRAME DETAIL

Download the DWG file by clicking here.

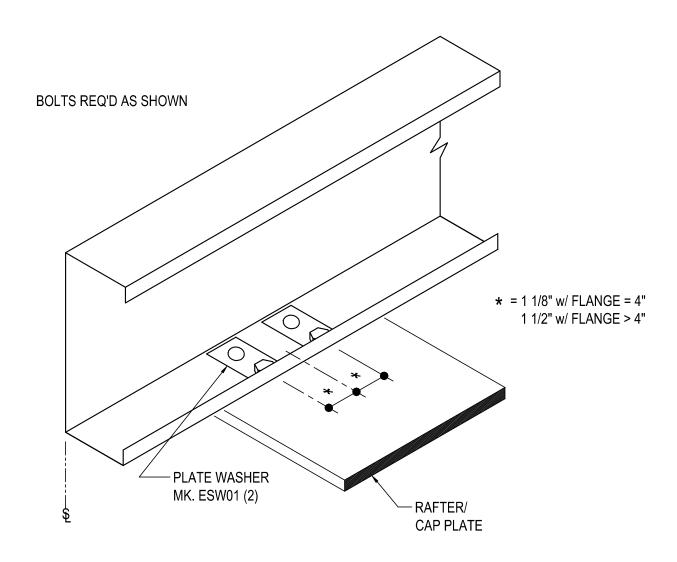

# EAVE STRUT AT ENDWALL FRAME

LOW EAVE - FLUSH/INSET SW GIRT CONDITION USE (2) 1/2" x 2" A325 BOLT H0603/NUT H0300 U.N.O.

BA0040

**Detailer Notes:** 

1) N/A

Issued: 10.28.20 (MR2020.11) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1


Issued By: KMC



**ROOF SECONDARY** 

#### BA0050 - LOW EAVE STRUT CF EW DETAIL

Download the DWG file by clicking here.

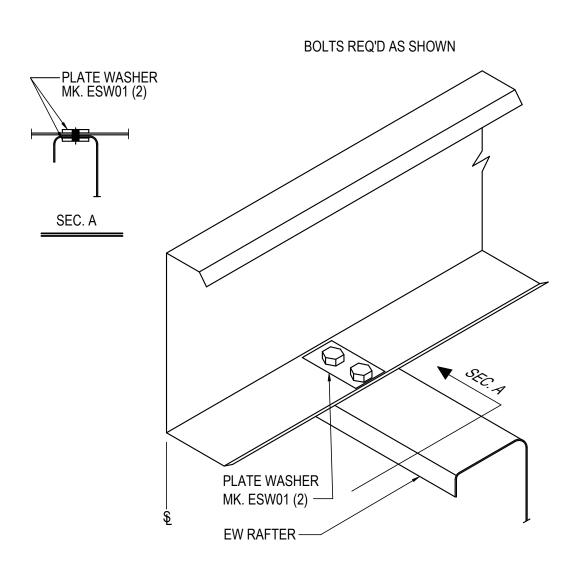

### **EAVE STRUT**

LOW EAVE COLD-FORMED EW CONDITION
USE (2) 1/2" X 2" A325 BOLT H0603/ NUT H0300 U.N.O.
REFERENCE ERECTOR NOTE FOR TYP. WASHER REQUIREMENTS

BA0050

**Detailer Notes:** 

1) N/A


Issued: 08.16.19 (2018.017) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1



**ROOF SECONDARY** 

#### BA0060 - LOW EAVE STRUT FLUSH/INSET WITH STRUT PLATE DETAIL

Download the DWG file by clicking here.

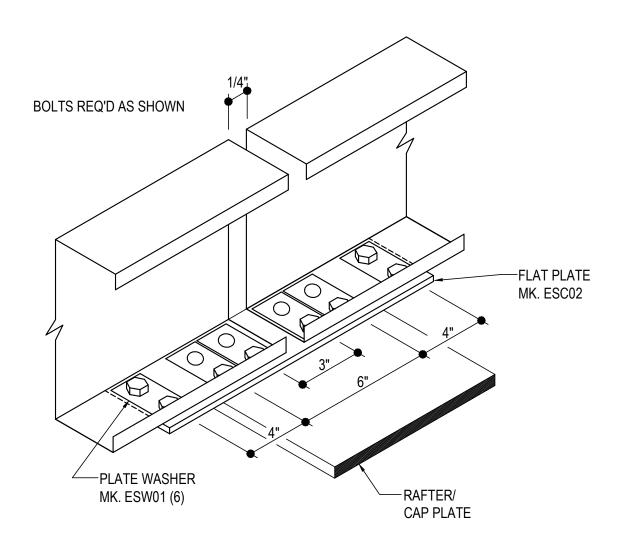

## EAVE STRUT WITH STRUT PLATE

LOW EAVE FLUSH/INSET SW GIRT CONDITION USE (8) 1/2" X 2" A325 BOLT H0603/ NUT H0300 U.N.O.

BA0060

#### Detailer Notes:

1) 8" MIN. CAP PLATE


Issued : 08.16.19 (2018.017) **CERTIFIED ERECTION DETAILS** Detail Size (W x H) : 1 x 1



**ROOF SECONDARY** 

BA0070 - LOW EAVE STRUT BYPASS SW GIRT WITH STRUT PLATE DETAIL

Download the DWG file by clicking here.

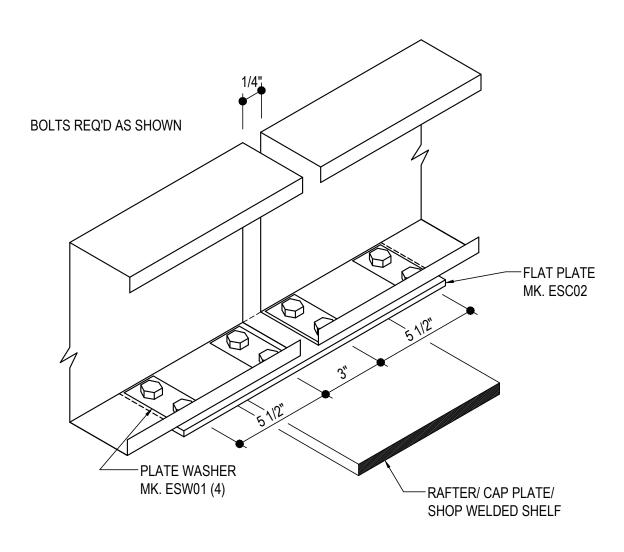

### EAVE STRUT WITH STRUT PLATE

LOW EAVE BYPASS SW GIRT CONDITION USE (8) 1/2" X 2" A325 BOLT H0603/NUT H0300 U.N.O.

BA0070

**Detailer Notes:** 

1) N/A


Issued: 08.16.19 (2018.017) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1



**ROOF SECONDARY** 

BA0080 - LOW EAVE STRUT BYPASS SW GIRT AT ENDWALL FRAME DETAIL

Download the DWG file by clicking here.

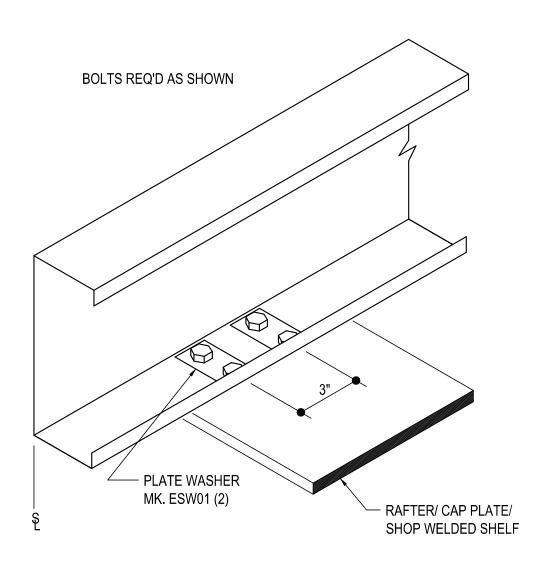

# EAVE STRUT AT ENDWALL FRAME

LOW EAVE - BYPASS SW GIRT CONDITION USE (4) 1/2" X 2" A325 BOLT H0603/NUT H0300 U.N.O.

BA0080

**Detailer Notes:** 

1) N/A

Issued: 10.28.20 (MR2020.11) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1


Issued By: KMC



**ROOF SECONDARY** 

BA0090 - LOW EAVE FLUSH/INSET SW GIRT AT RIGID FRAME ENDWALL DETAIL

Download the DWG file by clicking here.

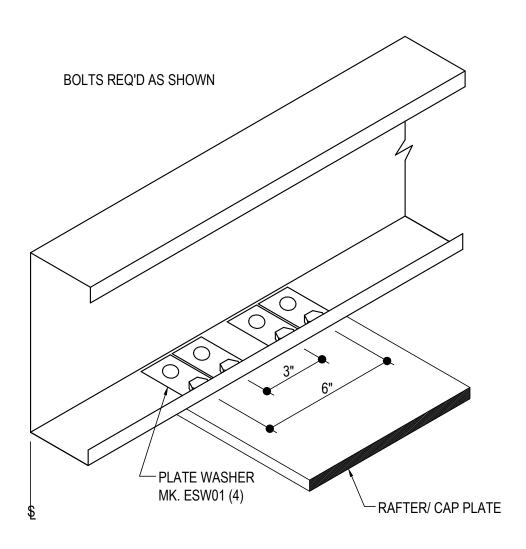

## EAVE STRUT AT RIGID FRAME ENDWALL

LOW EAVE FLUSH/INSET SW GIRT CONDITION USE (4) 1/2" X 2" A325 BOLT H0603/NUT H0300 U.N.O.

(BA0090)

**Detailer Notes:** 

1) 8" MIN. CAP PLATE


Issued : 08.16.19 (2018.017) **CERTIFIED ERECTION DETAILS** Detail Size (W x H) : 1 x 1



**ROOF SECONDARY** 

#### BA0100 - LOW EAVE STRUT CF EW DETAIL

Download the DWG file by clicking here.

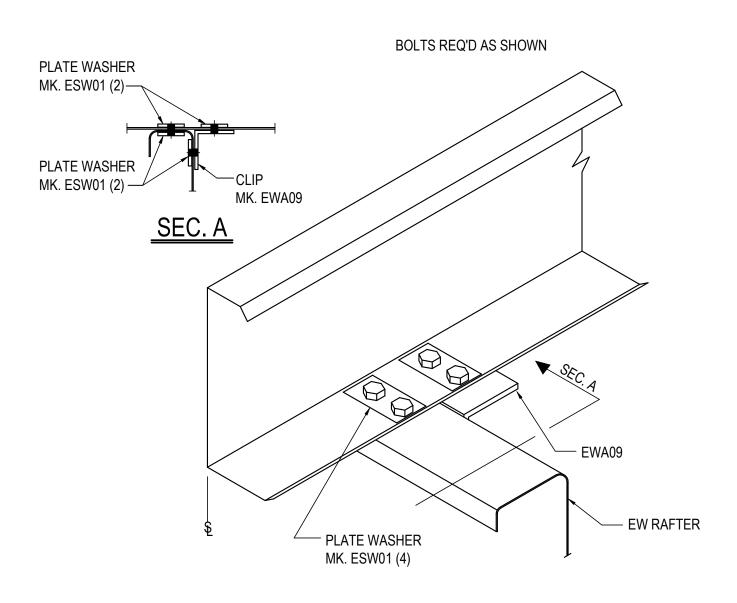

## **EAVE STRUT**

LOW EAVE COLD-FORMED EW CONDITION
USE (6) 1/2" X 2" A325 BOLT H0603/ NUT H0300 U.N.O.
REFERENCE ERECTOR NOTE FOR TYP. WASHER REQUIREMENTS

BA0100

**Detailer Notes:** 

1) N/A

Revised: 08.23.22 (MR2022.09) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1


Revised By: BSS



**ROOF SECONDARY** 

#### BA0115 - LOW EAVE STRUT FLUSH/INSET AT COLUMN AND ROOF JOISTS DETAIL

Download the DWG file by clicking here.

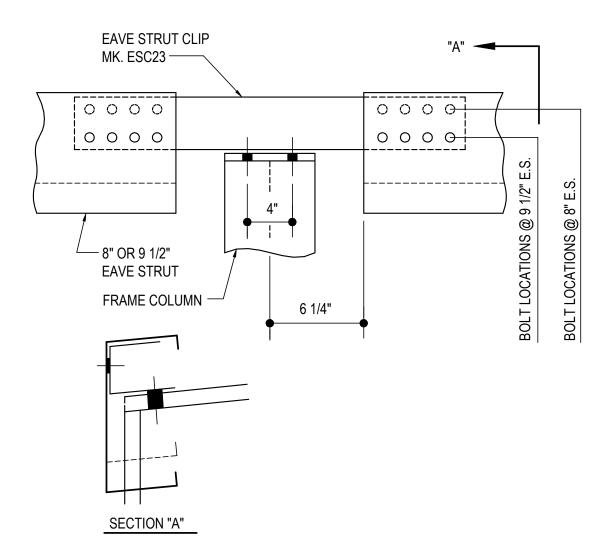

## EQ LEG EAVE STRUT AT COL

LOW EAVE FLUSH/INSET SW GIRT, ROOF JOISTS USE (10) 1/2" x 2" A325 BOLT H0603/NUT H0300 U.N.O.

BA0115

**Detailer Notes:** 

1) N/A


Issued : 08.16.19 (2018.017) **CERTIFIED ERECTION DETAILS** Detail Size (W x H) : 1 x 1



**ROOF SECONDARY** 

#### BA0125 - LOW EAVE STRUT @ ENDWALL RAFTER WITH ROOF JOISTS DETAIL

Download the DWG file by clicking here.

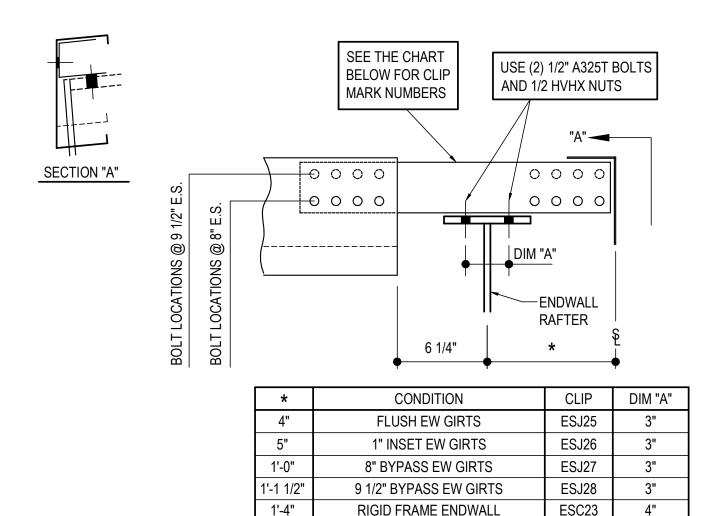

### EQ LEG EAVE STRUT-EW RAFTER

EAVE STRUT WITH ROOF JOIST AT LOW EAVE USE (4) 1/2" x 2" A325 BOLT H0603/NUT H0300 U.N.O.

BA0125

**Detailer Notes:** 

1) N/A

Revised : 10.22.20 (MR2020.11) CERTIFIED ERECTION DETAILS Detail Size (W x H) : 1 x 1

Revised By: SDF




### **GENERAL DETAILS**

**INSULATED WALL SHEETING** 

#### BA0140 - CEE PURLIN CONNECTION AT CANOPY

Download the DWG file by clicking here.

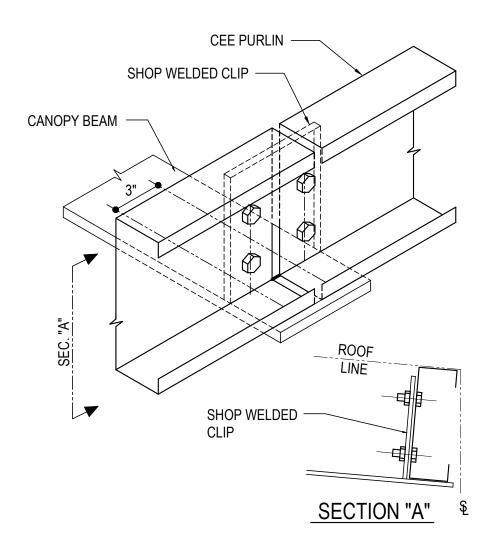

### CEE PURLIN CONNECTION AT CANOPY

USE (4) 1/2" x 2" A325 BOLTS H0603/NUTS H0300 REFERENCE ERECTOR NOTE FOR TYP. WASHER REQUIREMENTS

BA0140

**Detailer Notes:** 

1) N/A

Issued : 06.18.21 (2019.019) **CERTIFIED ERECTION DETAILS** Detail Size (W x H) : 1 x 1

Issued By: SDF




### **GENERAL DETAILS**

INSULATED WALL SHEETING

#### BA0145 - CEE PURLIN TERMINATION AT CANOPY

Download the DWG file by clicking here.

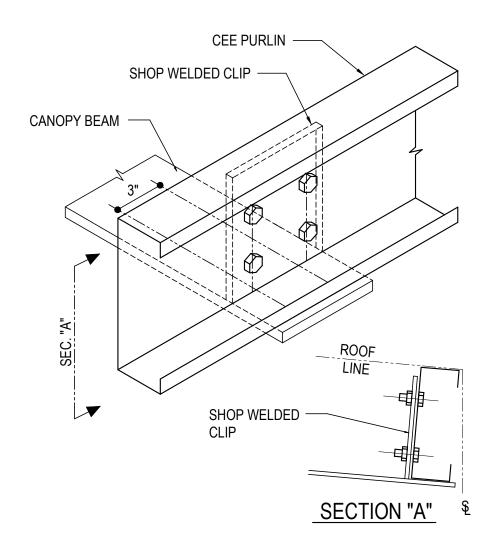

### CEE PURLIN TERMINATION AT CANOPY

USE (4) 1/2" x 2" A325 BOLTS H0603/NUTS H0300 REFERENCE ERECTOR NOTE FOR TYP. WASHER REQUIREMENTS

BA0145

**Detailer Notes:** 

1) N/A

Issued : 06.18.21 (2019.015) **CERTIFIED ERECTION DETAILS** Detail Size (W x H) : 1 x 1


Issued By: SDF




**ROOF SECONDARY** 

#### BA0200 - EAVE STRUT AT STRUCTURAL EXPANSION DETAIL

Download the DWG file by clicking here.

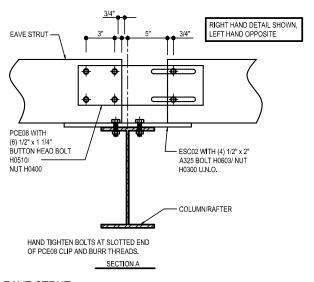

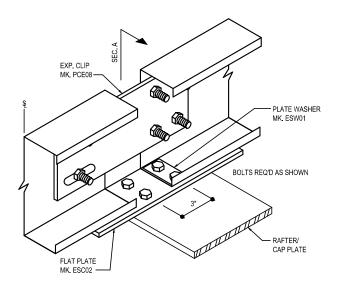

**EAVE STRUT** 

STRUCTURAL EXPANSION JOINT AT EAVE STRUT

BA0200

#### **Detailer Notes:**

1) ONLY USE AT BYPASS SW

Revised: 07.23.20 (MR2020.08) CERTIFIED ERECTION DETAILS Detail Size (W x H): 2 x 1


Revised By: KMC



**ROOF SECONDARY** 

#### BA0340 - EAVE ANGLE ATTACHMENT

Download the DWG file by clicking here.

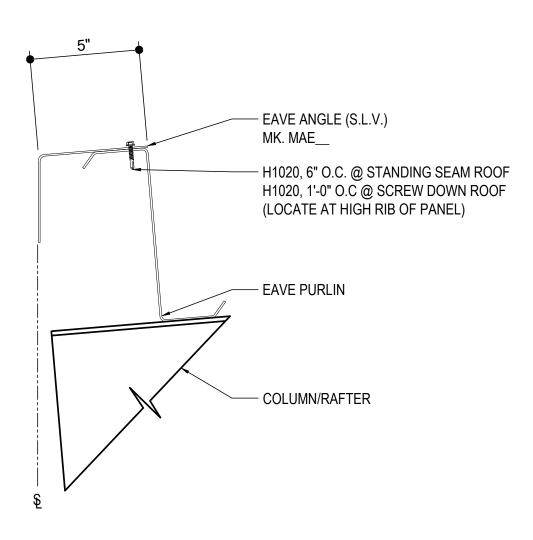

## **EAVE ANGLE**

REVERSE PURLIN WITH EAVE ANGLE

BA0340

**Detailer Notes:** 

1) N/A

Issued: 10.14.22 (2020.039) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1

Issued By: SLF




**ROOF SECONDARY** 

Detail Size (W x H): 1 x 1

#### BA2000 - EAVE ZEE MEMBER FOR R-Boost™

Download the DWG file by clicking here.

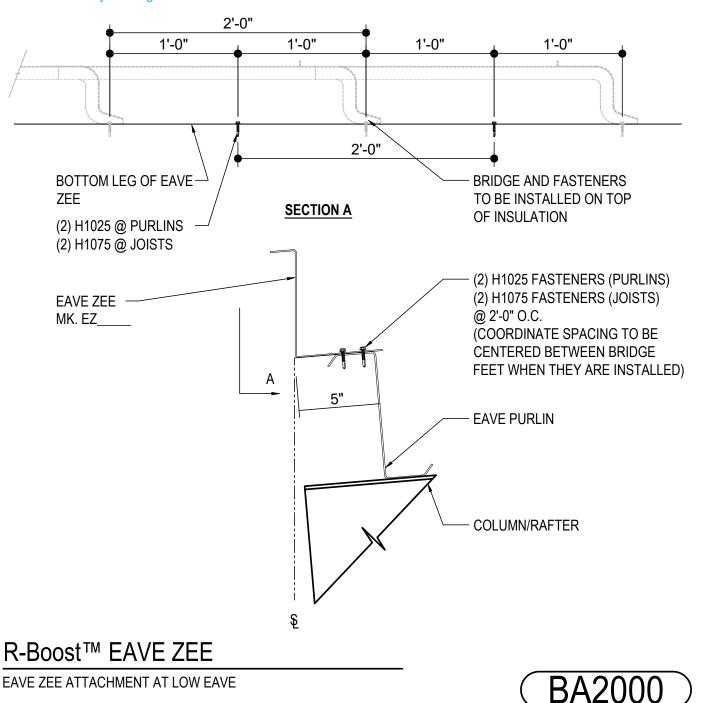

#### **Detailer Notes:**

1) USE WITH EVERY PROJECT WITH R-Boost™ ROOF SYSTEMS. THE EAVE ZEE IS TO BE INSTALLED AT TIME OF PURLIN INSTALLATION.

Revised: 10.14.22 (2020.039)

Revised By: SLF