

TABLE OF CONTENTS

TRANSLUCENT WALL PANELS

GE0001 - TRANSLUCENT WALL PANEL LAP - REVERSE R-PANEL & A-PANEL

GE0002 - TRANSLUCENT WALL PANEL LAP - R-PANEL

GE0010 - TRANSLUCENT WALL PANEL SIDELAP - R-PANEL

GE0035 - ALT. OUTSIDE CORNER AT TRANSLUCENT WALL PANEL - R-PANEL

GE0040 - TRANSLUCENT WALL PANEL SIDELAP - A-PANEL

GE0065 - ALT. OUTSIDE CORNER AT TRANSLUCENT WALL PANEL - A-PANEL

GE0070 - TRANSLUCENT WALL PANEL SIDELAP - REV R-PANEL

GE0095 - ALT. OUTSIDE CORNER AT TRANSLUCENT WALL PANEL - REV R-PANEL

GE0100 - LOW EAVE WITH TRANSLUCENT WALL PANEL


GE0110 - RAKE WITH TRANSLUCENT WALL PANEL

GE0120 - HIGH EAVE WITH TRANSLUCENT WALL PANEL



GE0001 - TRANSLUCENT WALL PANEL LAP DETAIL - REVERSE R-PANEL & A-PANEL

Download the DWG file by clicking here.

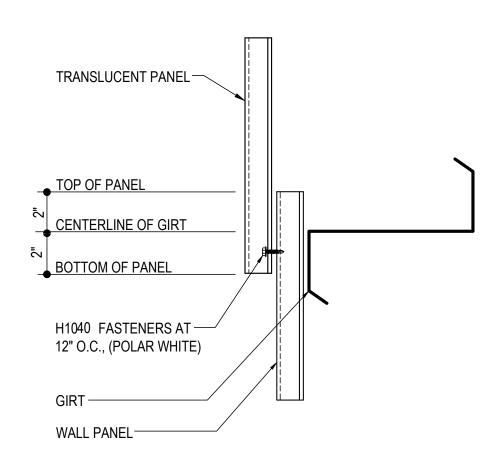

TRANSLUCENT PANEL LAP

TRANSLUCENT PANEL TO METAL PANEL

GE0001


Detailer Notes:

1) N/A

Issued: 10.14.22 (2019.052) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1

GE0002 - TRANSLUCENT WALL PANEL LAP DETAIL - R-PANEL

Download the DWG file by clicking here.

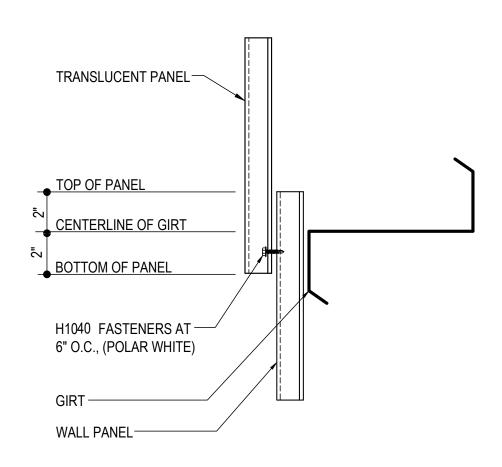

TRANSLUCENT PANEL LAP

TRANSLUCENT PANEL TO METAL PANEL

GE0002

Detailer Notes:

1) N/A


Issued: 10.14.22 (2019.052) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1

GE0010 - TRANSLUCENT WALL PANEL SIDELAP DETAIL - R-PANEL

Download the DWG file by clicking here.

FASTENER REQUIREMENTS

| FASTEN TO GIRTS @ MID-SPAN W/ H1040 AT 12" O.C. | FASTEN SIDELAPS W/H1060 AT 30" O.C. MAX. |
|--|---|
| FASTEN ENDLAPS W/H1040 AT 6" O.C. | FASTEN @ EAVE & RAKE W/ H1040 AT 12" O.C. |

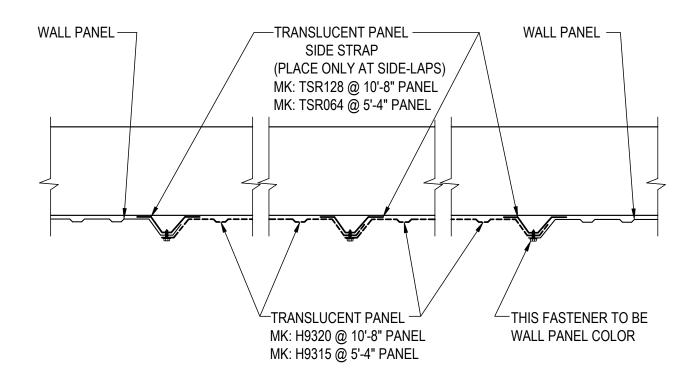

TRANSLUCENT PANEL SIDELAP DETAIL

TRANSLUCENT PANEL FASTENERS ARE POLAR WHITE

GE0010

Detailer Notes:


1) N/A

Issued: 06.20.23 (MR2023.07) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1

Issued By: WME

GE0035 - ALT. OUTSIDE CORNER AT TRANSLUCENT WALL PANEL - R-PANEL

Download the DWG file by clicking here.

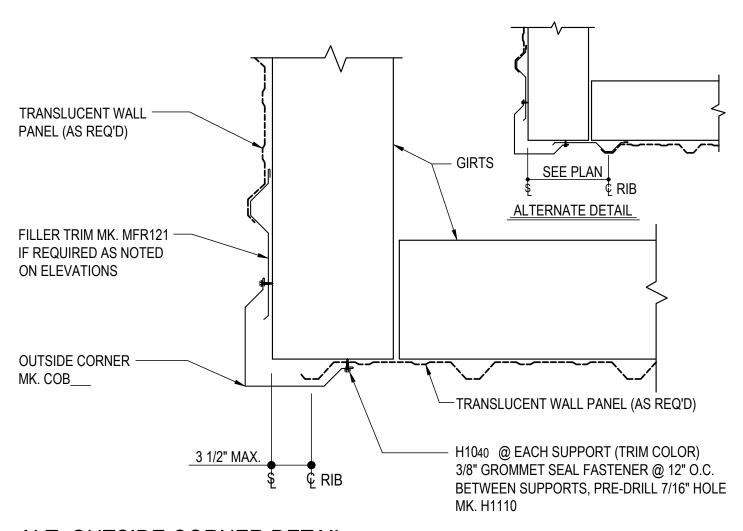

ALT. OUTSIDE CORNER DETAIL

TRANSLUCENT WALL PANEL

GE0035

Detailer Notes:

1) N/A

Issued: 10.14.22 (2019.052) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1




GE0040 - TRANSLUCENT WALL PANEL SIDELAP DETAIL - A-PANEL

Download the DWG file by clicking here.

FASTENER REQUIREMENTS

| FASTEN TO GIRTS @ MID-SPAN W/ H1040 AT 12" O.C. | FASTEN SIDELAPS W/H1060 AT 30" O.C. MAX. |
|--|---|
| FASTEN ENDLAPS W/H1040 AT 6" O.C. | FASTEN @ EAVE & RAKE W/ H1040 AT 12" O.C. |

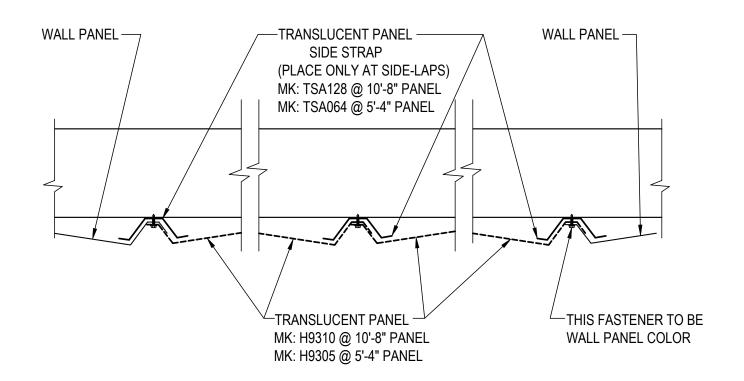

TRANSLUCENT PANEL SIDELAP DETAIL

TRANSLUCENT PANEL FASTENERS ARE POLAR WHITE

GE0040


Detailer Notes:

1) N/A

Issued: 10.14.22 (2019.052) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1

GE0065 - ALT. OUTSIDE CORNER AT TRANSLUCENT WALL PANEL - A-PANEL

Download the DWG file by clicking here.

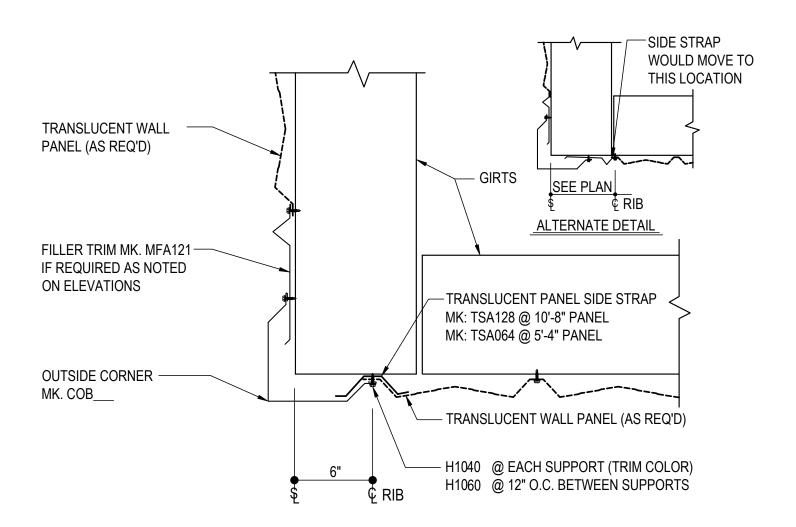

ALT. OUTSIDE CORNER DETAIL

TRANSLUCENT WALL PANEL

GE0065

Detailer Notes:

1) N/A



WALL SHEETING


TRANSLUCENT WALL PANELS

GE0070 - TRANSLUCENT WALL PANEL SIDELAP DETAIL - REVERSE R-PANEL

Download the DWG file by clicking here.

FASTENER REQUIREMENTS

| FASTEN TO GIRTS @ MID-SPAN W/ H1040 AT 12" O.C. | FASTEN SIDELAPS W/H1060 AT 30" O.C. MAX. |
|--|---|
| FASTEN ENDLAPS W/H1040 AT 12" O.C. | FASTEN @ EAVE & RAKE W/ H1040 AT 12" O.C. |

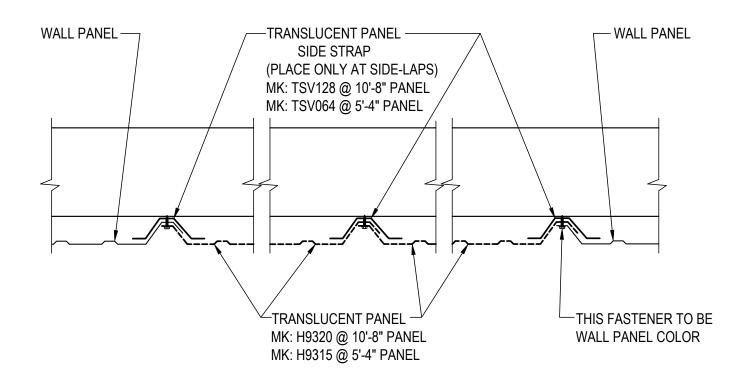

TRANSLUCENT PANEL SIDELAP DETAIL

TRANSLUCENT PANEL FASTENERS ARE POLAR WHITE

GE0070


Detailer Notes:

1) N/A

Issued: 10.14.22 (2019.052) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1

GE0095 - ALT. OUTSIDE CORNER AT TRANSLUCENT WALL PANEL - REVERSE R-PANEL

Download the DWG file by clicking here.

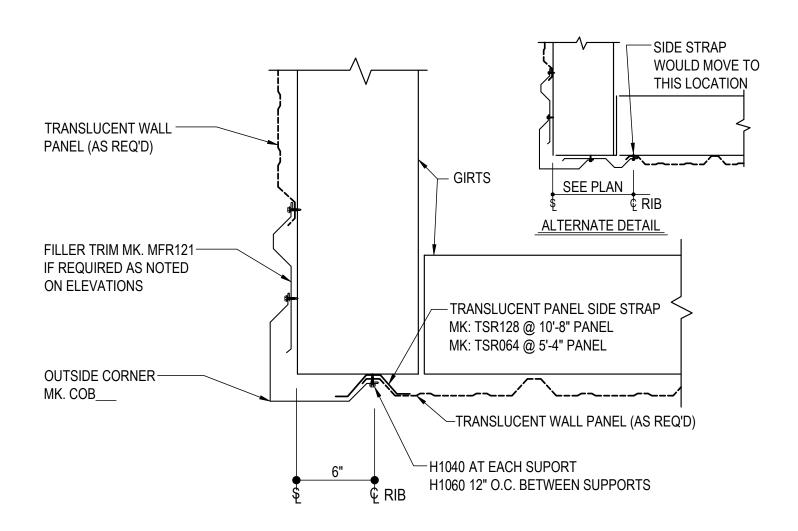

ALT. OUTSIDE CORNER DETAIL

TRANSLUCENT WALL PANEL

GE0095

Detailer Notes:


1) N/A

Issued: 10.14.22 (2019.052) CERTIFIED ERECTION DETAILS Detail Size (W x H): 2 x 2



GE0100 - LOW EAVE WITH TRANSLUCENT WALL PANEL

Download the DWG file by clicking here.

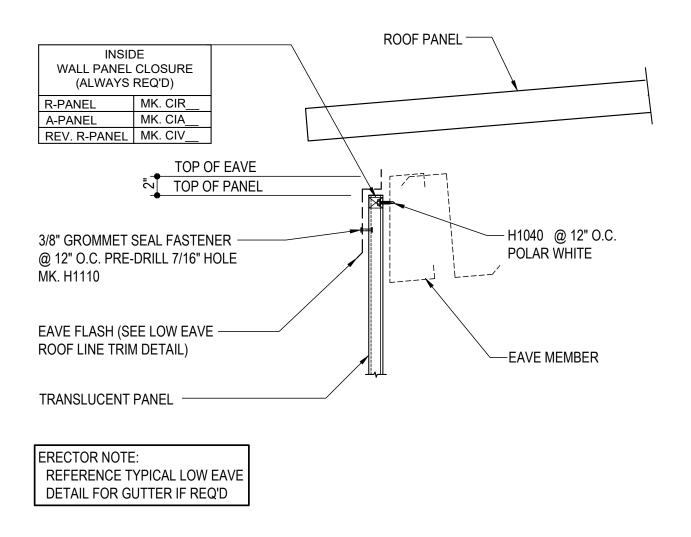

LOW EAVE DETAIL

LOW EAVE @ TRANSLUCENT WALL PANEL

(GE0100)

Detail Size (W x H): 1 x 1

Detailer Notes:


- 1) THIS DETAIL IS USED FOR ALL STANDARD WALL PANELS.
- 2) INSIDE CLOSURES ARE ALWAYS REQUIRED.
- 3) CLOSURE LOW EAVE LAYER MUST BE TURNED ON IF OUTSIDE CLOSURES ARE REQUIRED.

Issued : 05.02.23 (MR2023.05) CERTIFIED ERECTION DETAILS
Issued By: WME



GE0110 - RAKE WITH TRANSLUCENT WALL PANEL

Download the DWG file by clicking here.

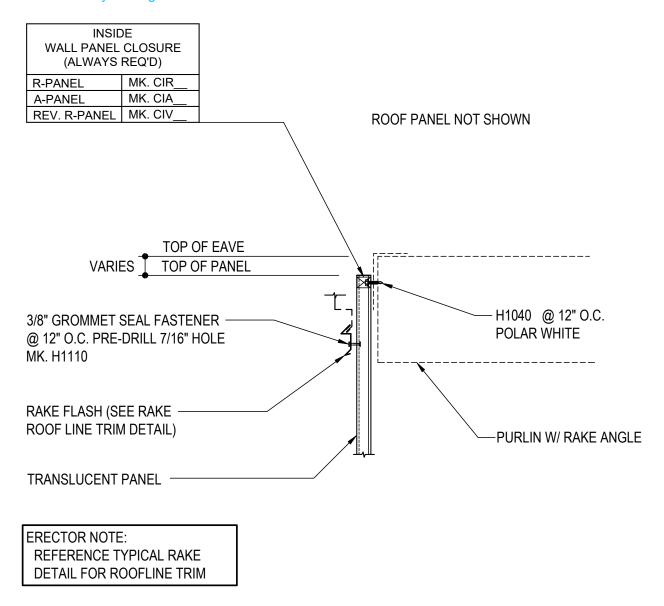

RAKE DETAIL

RAKE @ TRANSLUCENT WALL PANEL

GE0110

Detailer Notes:

- 1) THIS DETAIL IS USED FOR ALL STANDARD WALL PANELS.
- 2) INSIDE CLOSURES ARE ALWAYS REQUIRED.
- 3) CLOSURE LOW EAVE LAYER MUST BE TURNED ON IF OUTSIDE CLOSURES ARE REQUIRED.


: 05.02.23 (MR2023.05) Issued By: WME

Issued



GE0120 - HIGH EAVE WITH TRANSLUCENT WALL PANEL

Download the DWG file by clicking here.

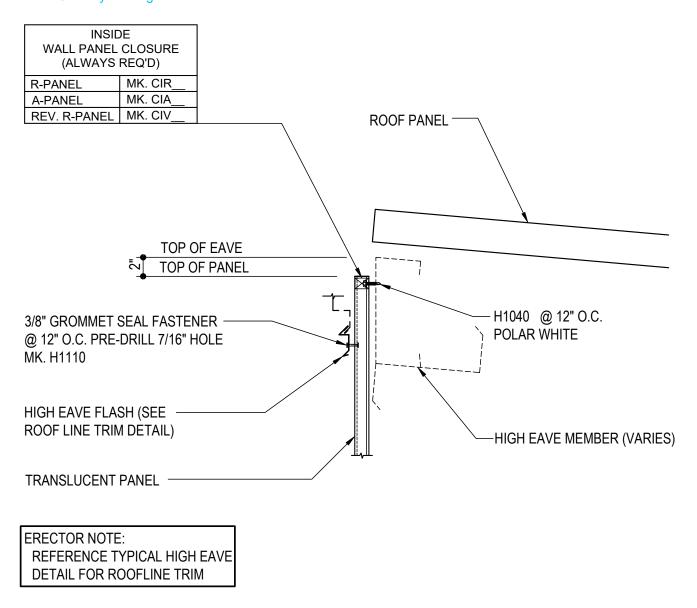

HIGH EAVE DETAIL

HIGH EAVE @ TRANSLUCENT WALL PANEL

GE0120

Detailer Notes:

- 1) THIS DETAIL IS USED FOR ALL STANDARD WALL PANELS.
- 2) INSIDE CLOSURES ARE ALWAYS REQUIRED.
- 3) CLOSURE LOW EAVE LAYER MUST BE TURNED ON IF OUTSIDE CLOSURES ARE REQUIRED.

: 06.29.23 (MR2023.07) Issued By: WME

Issued